



WITTENSTEIN

alpha

TK⁺/TPK⁺

Operating Manual



Revision history

Revision	Date	Comment	Chapter
01	15.02.2005	New version	All
02	15.02.2006	TPK+	All
03	11.02.2008	ANSI, Layout 07	All
04	01.07.2008	Layout WITTENSTEIN	All
05	30.01.2009	Dimensions 300, 500 High Torque®	3, 4, 5, 9
06	01.08.2009	Machinery Directive	1, 2, 3, 4, 6
07	10.12.2009	Technical data	5, 6, 9
08	26.10.2010	Dimensions 050, 110 High Torque®	9
09	22.12.2011	HIGH TORQUE	All

Service

In case you have technical questions,
please contact:

WITTENSTEIN alpha GmbH

Customer Service
Walter-Wittenstein-Straße 1
D-97999 Igersheim

Tel.: +49 7931 493-10900

Fax: +49 7931 493-10903

E-mail: service-alpha@wittenstein.de

© WITTENSTEIN alpha GmbH 2011

This documentation is copyright protected.

WITTENSTEIN alpha GmbH reserves all the rights to photo-mechanical reproduction, copying, and the distribution by special processes (such as computers, file media, data networks), even in parts.

Subject to technical and content changes without notice..

Contents

1	Regarding this manual	2
1.1	Signal words	2
1.2	Safety symbols	2
1.3	Design of the safety instructions	3
1.4	Information symbols	3
2	Safety	4
2.1	EC – Machinery directive	4
2.2	Dangers	4
2.3	Personnel	4
2.4	Intended use	4
2.5	Reasonably predictable misuse	4
2.6	Guarantee and liability	4
2.7	General safety instructions	5
3	Description of the gearhead	6
3.1	Type plate	6
3.2	Ordering code	7
3.3	Performance statistics	7
3.4	Weight	7
3.5	Noise emission	8
4	Transport and storage	8
4.1	Scope of delivery	8
4.2	Packaging	8
4.3	Transport	8
4.3.1	Transport of gearheads up to including size TK ⁺ /TPK ⁺ 300	8
4.3.2	Transport of gearheads as of size TK ⁺ /TPK ⁺ 500	9
4.4	Storage	9
5	Assembly	10
5.1	Preparations	10
5.2	Fastening the motor to the gearhead	10
5.3	Mounting gearhead on a machine	12
5.4	Components fastened to gear output side	12
6	Startup and operation	12
7	Maintenance and disposal	13
7.1	Maintenance work	13
7.1.1	Visual inspection	13
7.1.2	Checking the tightening torques	13
7.2	Startup after maintenance work	13
7.3	Maintenance schedule	13
7.4	Notes on the lubricant used	14
7.5	Disposal	14
8	Malfunctions	15
9	Appendix	16
9.1	Specifications for fastening to a motor	16
9.1.1	Specifications for the TK ⁺ version	16
9.1.2	Specifications for the TPK ⁺ MF	17
9.1.3	Specifications for the TPK ⁺ MA	17
9.2	Specifications on fastening to a machine	18
9.3	Specifications on mounting on the gear output side	19
9.3.1	Specifications for the TK ⁺ version	19
9.3.2	Specifications for the TPK ⁺ MF	19
9.3.3	Specifications for the TPK ⁺ MA	20
9.4	Tightening torques for common thread sizes in general mechanics	20

1 Regarding this manual

These instructions contain necessary information for the safe operation of the right-angle gearhead TK⁺/TPK⁺, referred to as gearhead in the following.

If this manual is supplied with an amendment (e.g. for special applications), then the information in the amendment is valid. Contradictory specifications in this manual thereby become obsolete.

The operator must ensure that these instructions are read through by all persons assigned to install, operate, or maintain the gearhead, and that they fully comprehend them.

Store these instructions within reach of the gearhead.

These **safety instructions** should be shared with colleagues working in the vicinity of the device to ensure individual safety.

The original instructions were prepared in German; all other language versions are translations of these instructions.

1.1 Signal words

The following signal words are used to indicate possible hazards, prohibitions, and important information:

	<p style="text-align: center;">⚠ DANGER</p> <p>This signal word points out to an imminent danger that can cause serious injuries and even death.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>This signal word points out to a possible danger that can cause serious injuries and even death.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This signal word points out to a possible danger that can cause slight to serious injuries.</p>
	<p style="text-align: center;">NOTICE</p> <p>This signal word points out to a possible danger that can cause material damage.</p>
	<p>A note without a signal word indicates application tips or especially important information for handling the gearhead.</p>

1.2 Safety symbols

The following safety symbols are used to bring your attention to dangers, prohibitions, and important information:



General danger



Hot surface



Suspended loads



Danger of being pulled in



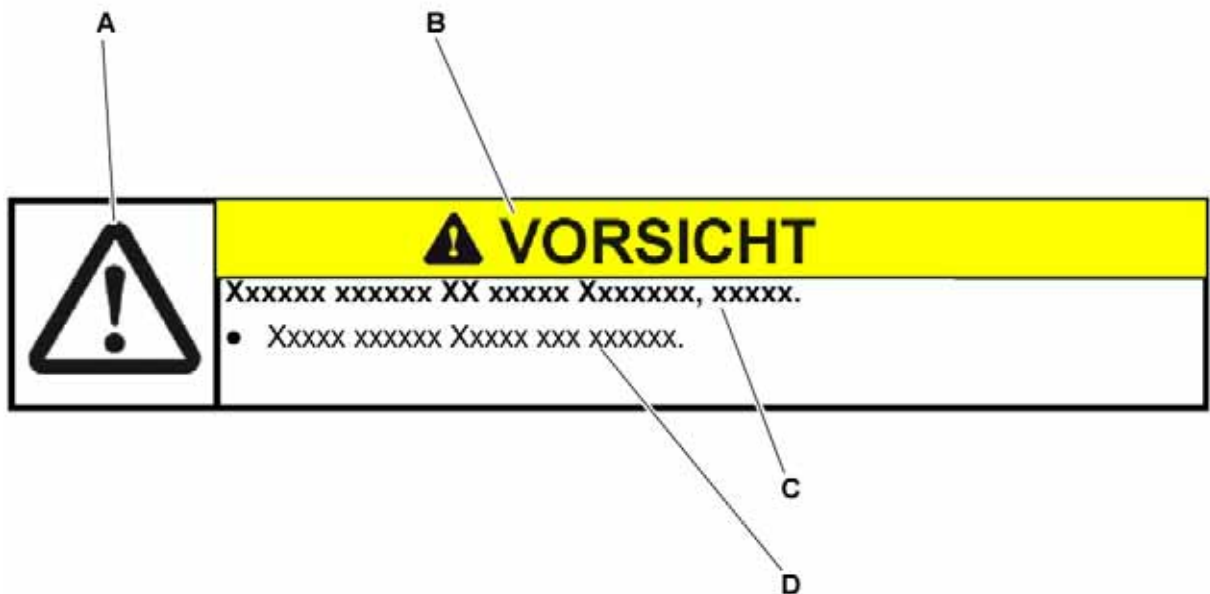
Environment protection



Information

1.3 Design of the safety instructions

The safety instructions of these instructions are designed according to the following pattern:



A = Safety symbol (see Chapter 1.2 "Safety symbols")

B = Signal word (see Chapter 1.1 "Signal words")

C = Type and consequence of the danger

D = Prevention of the danger

1.4 Information symbols

The following information symbols are used:

- Indicates an action to be performed
- ➞ Indicates the results of an action
- ⓘ Provides additional information on handling

2 Safety

These instructions, especially the safety instructions and the rules and regulations valid for the operating site, must be observed by all persons working with the gearhead.

In addition to the safety specifications mentioned in this operating manual, the general and also the local regulations on the prevention of accidents (for instance, personal safety equipment) and on environmental protection should be observed.

2.1 EC – Machinery directive

The gearhead is considered a "machine component" and is therefore not subject to the EC Machinery Directive 2006/42/EC.

Operation is prohibited within the area of validity of the EC directive until it has been determined that the machine in which this gearhead is installed corresponds to the regulations within this directive.

2.2 Dangers

The gearhead has been constructed according to current technological standards and accepted safety regulations.

To avoid danger to the operator or damage to the machine, the gearhead may be put to use only for its intended usage (see chapter 2.4 "Intended use") and in a technically flawless and safe state.

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

2.3 Personnel

Only persons who have read and understood these instructions may carry out work on the gearhead.

2.4 Intended use

The gearhead serves to convert torques and speeds. It is built for industrial applications that do not fall under article 2 of the directive 2002/95/EU (usage restriction of certain dangerous materials on electro and electronic equipment).

The gearhead may not be operated in areas with explosion hazards. In food processing, the gearhead may be used only next to or under the foodstuff area.

The gearhead is specified for installment on motors that:

- correspond to the design B5 (for any divergences, consult our Customer Service Department [technical customer service])
- show a radial and axial runout tolerance of at least "N" according to DIN 42955 and
- have a smooth shaft

2.5 Reasonably predictable misuse








Any usage that exceeds the maximum permitted speeds, torques and temperature is considered a misuse and is therefore prohibited.

2.6 Guarantee and liability

Guarantee and liability claims are excluded for personal injury and material damage in case of

- Ignoring the information on transport and storage
- Improper use (misuse)
- Improper or neglected maintenance and repair
- Improper assembly / disassembly or improper operation (e.g. test run without secure attachment)
- Operation of the gearhead when safety devices and equipment are defective
- Operation of the gearhead without lubricant
- Operation of a heavily soiled gearhead
- Modifications or reconstructions that have been carried out without the approval of **WITTENSTEIN alpha GmbH**

2.7 General safety instructions

	<p style="text-align: center;">⚠ WARNING</p> <p>Objects flung out by rotating components can cause serious injuries.</p> <ul style="list-style-type: none"> • Remove objects and tools from the gearhead before putting it into operation. • Remove/Secure the shaft key (if available) if the gearhead is operated without attachments on the output/drive side.
	<p style="text-align: center;">⚠ WARNING</p> <p>Rotating components on the gearhead can pull in parts of the body and cause serious injuries and even death.</p> <ul style="list-style-type: none"> • Keep a sufficient distance to rotating machinery while the gearhead is running. • Secure the machine against restarting and unintentional movements during assembly and maintenance work (e.g. uncontrolled lowering of lifting axes).
	<p style="text-align: center;">⚠ CAUTION</p> <p>Hot gearhead housing can cause serious burns.</p> <ul style="list-style-type: none"> • Touch the gearhead housing only when wearing protective gloves or after the gearhead has been at standstill for some time.
	<p style="text-align: center;">NOTICE</p> <p>Loose or overloaded screw connections can damage the gearhead.</p> <ul style="list-style-type: none"> • Use a calibrated torque wrench to tighten and check all screw connections for which a tightening torque has been specified.
	<p style="text-align: center;">⚠ WARNING</p> <p>Lubricants are flammable.</p> <ul style="list-style-type: none"> • Do not spray with water to extinguish. • Suitable extinguishing agents are powder, foam, water mist, and carbon dioxide. • Observe the safety instructions of the lubricant manufacturer (see Chapter 7.4 "Notes on the lubricant used").
	<p style="text-align: center;">⚠ CAUTION</p> <p>Solvents and lubricants can cause skin irritations.</p> <ul style="list-style-type: none"> • Avoid direct skin contact.
	<p>Solvents and lubricants can pollute soil and water.</p> <ul style="list-style-type: none"> • Use and dispose of cleaning solvents as well as lubricants appropriately.

3 Description of the gearhead

The gearhead is a single- or multi-stage, low-backlash angle gear, which is manufactured as standard in the "M" version (motor installation).

Various planetary gearheads can be integrated on the drive side (TK⁺) as well as on the gear output side (TPK⁺).

Motor centering of the motor-mounted gearhead is performed:

- up to a motor shaft diameter of 28 mm by the clamping hub
- as of a motor shaft diameter of > 28 mm by the centering collar of the motor

A radial distortion of the motor is avoided.

Various types of motors can be accommodated using an adapter plate and a bushing.

The gearhead is equipped with an integrated linear length compensation to compensate for the expansion of the motor shaft when heated up.

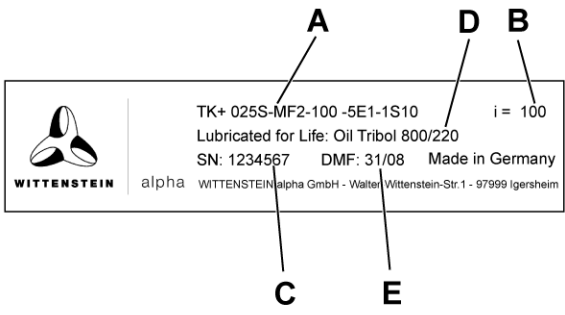


There are two centering mechanisms for the output flange, in accordance with ISO 9409.

The hollow shaft running through serves as a conduit for lines or hoses, but does not aid in securing the load. On the back side of the output flange, the position and/or the speed of the load can be measured through the hollow shaft.

3.1 Type plate

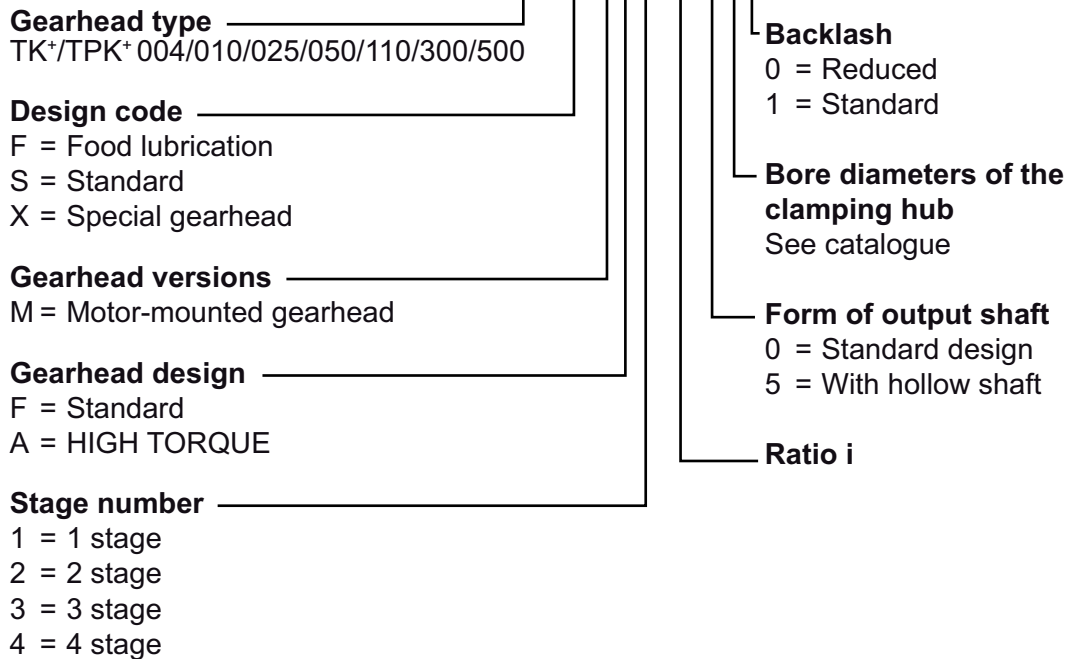
The type plate is attached to the gearhead housing.

		Designation
	A	Ordering code (see Chapter 3.2 "Ordering code")
	B	Ratio
	C	Serial number
	D	Lubricant
	E	Production date

Tbl-1: Type plate (sample values)


3.2 Ordering code

TK+025S-MF1-10-0H1



3.3 Performance statistics

Refer to our catalogue or our Internet page for the maximum permitted speeds and torques:<http://www.wittenstein-alpha.de>

	Consult our Customer Service department if the gearhead is older than a year. You will then receive the valid performance data.
---	--

3.4 Weight


The table "Tbl-2" specifies the gearhead dimensions with medium-sized adapter plate. If a different adapter plate is mounted, the actual dimensions can deviate by up to 10%.

Gearhead size TK ⁺	004	010	025	050	110	—	—
1-stage [kg]	2.9	5.3	8.9	22	48	—	—
2-stage [kg]	3.2	6.1	10.6	26	54	—	—
Gearhead size TPK ⁺ MF	—	010	025	050	110	300	500
2-stage [kg]	—	5.2	9	17	41	83	—
3-stage [kg]	—	5.5	9.8	18.7	45.4	87	96
4-stage [kg]	—	—	—	—	—	—	99
Gearhead size TPK ⁺ MA	—	010	025	050	110	300	500
2-stage [kg]	—	5.2	9	17	41	83	—
3-stage [kg]	—	—	XX	XX	XX	83	120
4-stage [kg]	—	—	XX	XX	XX	87	124
MA = HIGH TORQUE; XX = on request							

Tbl-2: Weight

3.5 Noise emission

Depending on the gearhead type and the product size, the continuous sound pressure level may reach 75 dB(A).

	Contact our Customer Service department if further information is needed regarding a particular product.
---	---

4 Transport and storage

4.1 Scope of delivery


- Check the completeness of the delivery against the delivery note.
 - ① Missing parts or damage must be notified immediately in writing to the carrier, the insurance, or **WITTENSTEIN alpha GmbH**.


4.2 Packaging

The gearhead is delivered packed in foil and cardboard boxes.

- Dispose of the packaging materials at recycling sites intended for that. Observe the locally valid regulations for disposals.

4.3 Transport

	⚠ WARNING
	<p>Suspended loads can fall and can cause serious injuries and even death.</p> <ul style="list-style-type: none"> • Do not stand under suspended loads. • Secure the gearhead before transport with suitable fasteners (e.g. belts).

	NOTICE
	<p>Hard knocks, because of falling or hard dropping, can damage the gearhead.</p> <ul style="list-style-type: none"> • Only use hoisting equipment and transports with sufficient capacity. • The maximum permitted lift capacity of a hoist may not be exceeded. • Lower the gearhead slowly.

Specifications on the weights, refer to Chapter 3.4 "Weight".

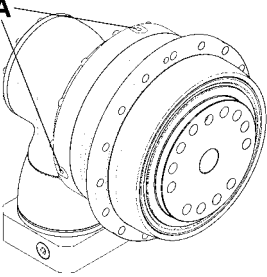
4.3.1 Transport of gearheads up to including size TK⁺/TPK⁺ 300

No special transport mode is prescribed for transporting the gearhead.

For gearheads of size TP⁺/TPK⁺ 110 or greater, we recommend the use of hoisting equipment.

4.3.2 Transport of gearheads as of size TK⁺/TPK⁺ 500

Gearheads from the size TK⁺/TPK⁺ 500 have support bores (A) for ring screws (e.g. according to DIN 580). The ring screws are used for attaching the gearhead securely to the hoisting equipment.

	Gearhead size TK ⁺ /TPK ⁺	Support bores (A) [Ø] x depth [mm]
	500	3 x M10 x 18

Tbl-3: Support bore on the gearhead

4.4 Storage


Store the gearhead in horizontal position and dry surroundings at a temperature of 0 °C to +40 °C in the original packaging. Store the gearhead for a maximum of 2 years.


For storage logistics, we recommend the "first in – first out" method.

5 Assembly

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

5.1 Preparations

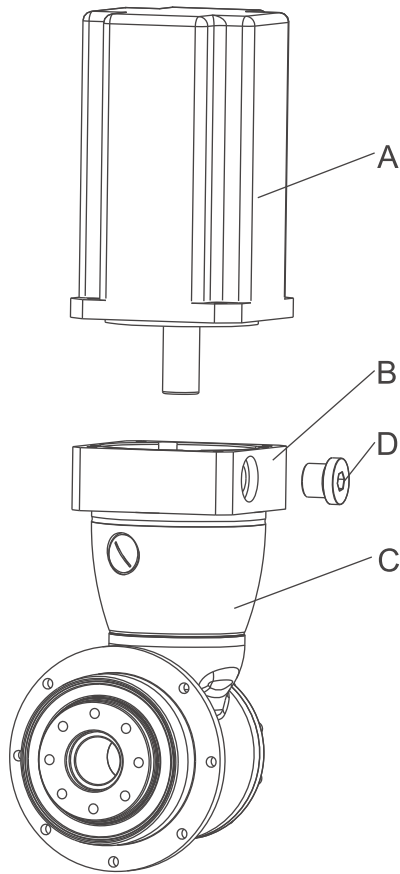
	NOTICE
	<p>Pressurized air can damage the gearhead seals.</p> <ul style="list-style-type: none"> • Do not use pressurized air to clean the gearhead.

	NOTICE
	<p>Directly sprayed cleaning agents can alter the frictional values of the clamping hub.</p> <ul style="list-style-type: none"> • Only spray cleaning agents onto a cloth for wiping off the clamping hub.

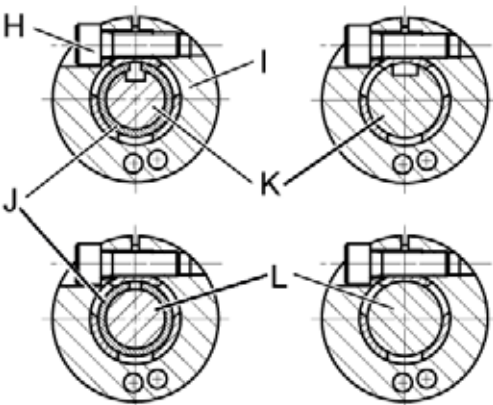
- Check that the motor meets the specifications in Chapter 2.4 "Intended use".
- Clean/De-grease the following components with a clean and lint-free cloth and grease-dissolving, non-aggressive detergent:
 - All fitting surfaces to neighboring components
 - Centering
 - The motor shaft
 - The inside diameter of the clamping hub
 - The bushing inside and out
- Dry all fitting surfaces to neighboring components in order to achieve the proper friction values of the screw connections.
- Check the fitting surfaces additionally for damage and impurities.

5.2 Fastening the motor to the gearhead

	<ul style="list-style-type: none"> • Observe the specifications and safety instructions of the motor manufacturer. • Observe the safety and processing instructions of the screw-bonding agents to be used.
--	---



- Ensure that the motor is mounted if possible in a vertical direction.
- If the motor shaft has a shaft key, remove the shaft key.
 - ① If recommended by the motor manufacturer, apply a half wedge.
- Remove the plug from the mounting hole in the adapter plate (B).
- Turn the clamping hub (I) until the clamping bolt (H) can be reached through the mounting bore.
- Loosen the clamping bolt (H) of the clamping hub (I) by one revolution.
- Push the motor shaft into the clamping hub of the gearhead.
 - ① The motor shaft should slip in easily. If this is not the case, the clamping bolt needs to be loosened some more.
 - ① A slotted bushing has to be installed extra for certain motor shaft diameters and applications.
 - ① The slot of the bushing (if provided) and clamping hub have to be flush with the groove (if provided) of the motor shaft, see table "Tbl-4".
 - ① No gap is permitted between the motor (A) and the adapter plate (B).

		Designation	
		H	Clamping bolt
		I	Clamping ring (part of the clamping hub)
		J	Bushing
		K	Keyed shaft
		L	Smooth shaft

Tbl-4: Arrangement of motor shaft, clamping hub, and bushing

- ① Motor centering of the motor-mounted gearhead is performed:
 - up to a motor shaft diameter of 28 mm by the clamping hub
 - as of a motor shaft diameter of > 28 mm by the centering collar of the motor
- Coat the four bolts with a threadlocker (e.g., Loctite 243).
- Fasten the motor (A) onto the adapter plate (B) with the four screws.
- Tighten the clamping bolt (H) of the clamping hub (I).
 - ① For bolt sizes and specified torques refer to Chapter 9.1 "Specifications for fastening to a motor", Tables "Tbl-10", "Tbl-11" and "Tbl-12".
- Screw in the plug (D) of the adapter plate (B).
 - ① For screw sizes and tightening torques, see Table "Tbl-5".

Width across flats [mm]	5	8	10
Tightening torque [Nm]	10	35	50


Tbl-5: Tightening torque for the plugs

5.3 Mounting gearhead on a machine

	<ul style="list-style-type: none"> ● Observe the safety and processing instructions of the screw-bonding agents to be used.
--	--

- Smear screw-bonding agent (e.g. Loctite 243) onto the fastening bolts.
- Fasten the gearhead on the machine with the bolts through the holes.
 - ① Mount the gearhead in such a way that the type plate remains legible.
 - ① Do not use washers (e.g. plain washers, tooth lock washers).
 - ① For screw sizes and specified torques refer to chapter 9.2 "Specifications on fastening to a machine", table "Tbl-13".

5.4 Components fastened to gear output side

	NOTICE
	<p>Distortions during mounting operations can damage the gearhead.</p> <ul style="list-style-type: none"> ● Mount gearwheels and toothed belt pulleys onto the output flange without forcing. ● Do not on any account attempt an assembly by force or hammering! ● Only use suitable tools and equipment for assembly.

- ① For prescribed screw sizes and torques, refer to Chapter 9.3 "Specifications on mounting on the gear output side", Tables "Tbl-14", "Tbl-15" and "Tbl-16".

6 Startup and operation

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

	<p>Improper use can cause damage to the gearhead.</p> <ul style="list-style-type: none"> ● Make sure that <ul style="list-style-type: none"> - the ambient temperature does not drop below 0 °C or exceed +40 °C and - the operating temperature does not exceed +90 °C. ● Avoid icing, which can damage the seals. ● For other conditions of use, please consult our Customer Service Department. ● Only use the gearhead only up to its maximum limit values, see Chapter 3.3 "Performance statistics". ● Only use the gearhead only in a clean, dust-free and dry environment.
--	--

7 Maintenance and disposal

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

7.1 Maintenance work

7.1.1 Visual inspection

- Check the entire gearhead for exterior damage.
- The radial shaft seals are subject to wear. Therefore also check the gearhead for leakage during each visual inspection.
 - ① You can find more general information on radial shaft seals on our partner's Internet site at <http://www.simrit.de>.
 - ① Check the mounting position, so that no foreign medium (e.g. oil) has collected on the output shaft.

7.1.2 Checking the tightening torques

- Check the tightening torque of the clamping bolt on the motor mounting as well as the fastening screws on the output flange. If, while checking the tightening torque, you discover that the screw can be turned further, tighten it to the prescribed torque.
 - ① The prescribed tightening torques can be found in Chapter 9.1 "Specifications for fastening to a motor", Tables "Tbl-10", "Tbl-11" and "Tbl-12" as well as in Chapter 9.3 "Specifications on mounting on the gear output side", Tables "Tbl-14", "Tbl-15" and "Tbl-16".
- Check the tightening torque of the fastening screws on the gearhead housing. If, while checking the tightening torque, you discover that the fastening screw can be further tightened, follow the instructions in "Remount the screw".
 - ① The prescribed tightening torques can be found in Chapter 9.2 "Specifications on fastening to a machine", Table "Tbl-13".

Remount the screw

	<ul style="list-style-type: none"> • Make sure that it is possible to remount the screw on the gearhead without the risk of damage to the entire machine.
--	--

- Loosen the screw.
- Remove the residue glue from the threaded bore and from the screw.
- De-grease the screw.
- Coat the screw with a threadlocker (e.g. Loctite® 243).
- Screw in the screw and tighten it with the prescribed tightening torque.

7.2 Startup after maintenance work


- Clean the outside of the gearhead.
- Attach all safety devices.
- Do a trial run before releasing the gearhead again for operation.

7.3 Maintenance schedule

Maintenance work	At startup	First time after 500 operating hours or 3 months	Every 3 months	Yearly
Visual inspection	X	X	X	
Checking the tightening torques	X	X		X

Tbl-6: Maintenance schedule

7.4 Notes on the lubricant used

	<p>All gearheads are permanently lubricated by the manufacturer with synthetic gear oil (polyglycols) of viscosity class ISO VG100, ISO VG220 or with a high-performance lubricant (see type plate). All bearings are permanently lubricated by the company.</p>
---	--

The manufacturer listed below will provide any further information on the lubricants:

Standard lubricants	Lubricants for the food industry (NSF-H1 registered)
Castrol Industrie GmbH, Mönchengladbach Tel.: + 49 2161 909-30 www.castrol.com	Klüber Lubrication München KG, Munich Tel.: + 49 89 7876-0 www.klueber.com



Tbl-7: Lubricant manufacturers

7.5 Disposal

Consult our Customer Service department for supplementary information on exchanging the adapter plate, on disassembly, and on disposal of the gearhead.

- Dispose of the gearhead at the recycling sites intended for this purpose.
 - ① Observe the locally valid regulations for disposals.

8 Malfunctions

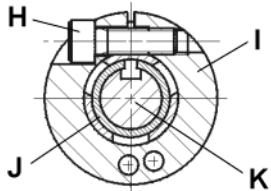
	NOTICE
	<p>Changed operational behavior can be an indication of existing damage to the gearhead or cause damage to the gearhead.</p> <ul style="list-style-type: none"> Do not put the gearhead back into operation until the cause of the malfunction has been rectified.
	<p>Rectifying of malfunctions may only be done by specially trained technicians.</p>

Fault	Possible cause	Solution
Increased operating temperature	The gearhead is not suited for the task.	Check the technical specifications.
	Motor is heating the gearhead.	Check the wiring of the motor.
		Ensure adequate cooling.
	Change the motor.	
	Ambient temperature too high.	Ensure adequate cooling.
Increased noises during operation	Distortion in motor mounting	Please consult our Customer Service Department.
	Damaged bearings	
	Damaged gear teeth	
Loss of lubricant	Lubricant quantity too high	Wipe off discharged lubricant and continue to watch the gearhead. Lubricant discharge must stop after a short time.
	Seals not tight	Please consult our Customer Service Department.

Tbl-8: Malfunctions

9 Appendix

9.1 Specifications for fastening to a motor

		Designation
	H	Clamping bolt
	I	Clamping ring (part of the clamping hub)
	J	Bushing
	K	Shaft

Tbl-9: Arrangement of motor shaft, clamping hub, and bushing

9.1.1 Specifications for the TK⁺ version

Gearhead size TK ⁺		Clamping hub interior Ø "x" [mm]	Clamping screw (H)/ property class DIN ISO 4762	Width across flats [mm]	Tightening torque [Nm]	max. axial force clamping hub [N]	
						Plug receptacle	Coupling
004	1-stage	$x \leq 14$ $14 < x \leq 19$	M5 / 10.9 M6 / 10.9	4 5	8.5 14	—	10
	2-stage	$x \leq 11$ $11 < x \leq 14$	M4 / 12.9 M5 / 12.9	3 4	4.1 9.5	80	—
010	1-stage	$x \leq 19$ $19 < x \leq 28$	M6 / 10.9 M8 / 10.9	5 6	14 35	—	20
	2-stage	$x \leq 14$ $14 < x \leq 19$	M5 / 12.9 M6 / 12.9	4 5	9.5 14	100	—
025	1-stage	$x \leq 28$ $28 < x \leq 38$	M8 / 10.9 M10 / 10.9	6 8	35 69	—	30
	2-stage	$x \leq 19$ $19 < x \leq 28$	M6 / 12.9 M8 / 12.9	5 6	14 35	120	—
050	1-stage	$x \leq 38$	M10 / 10.9	8	69	—	50
	2-stage	$x \leq 24$ $24 < x \leq 38$	M8 / 12.9 M10 / 12.9	6 8	35 79	150	—
110	1-stage	$x \leq 48$	M12 / 10.9	10	86	—	200
	2-stage	$x \leq 38$ $38 < x \leq 48$	M10 / 12.9 M12 / 12.9	8 10	79 135	200	—

Tbl-10: Specifications on mounting onto a motor

9.1.2 Specifications for the TPK⁺ MF

Gearhead size TPK ⁺ MF	Clamping hub interior Ø "x" [mm]	Clamping screw (H)/ property class DIN ISO 4762	Width across flats [mm]	Tightening torque [Nm]	Max. axial force clamping hub [N]		
					Plug receptacle	Coupling	
010	2-stage	$x \leq 14$	M5 / 10.9	4	8.5	—	10
		$14 < x \leq 19$	M6 / 10.9	5	14	—	—
025	2-stage	$x \leq 11$	M4 / 12.9	3	4.1	80	—
		$11 < x \leq 14$	M5 / 12.9	4	9.5	—	—
050	2-stage	$x \leq 19$	M6 / 10.9	5	14	—	20
		$19 < x \leq 28$	M8 / 10.9	6	35	—	—
110	2-stage	$x \leq 14$	M5 / 12.9	4	9.5	100	—
		$14 < x \leq 19$	M6 / 12.9	5	14	—	—
050	3-stage	$x \leq 28$	M8 / 10.9	6	35	—	30
		$28 < x \leq 38$	M10 / 10.9	8	69	—	—
110	3-stage	$x \leq 19$	M6 / 12.9	5	14	120	—
		$19 < x \leq 28$	M8 / 12.9	6	35	—	—
300	2-stage	$x \leq 38$	M10 / 10.9	8	69	—	50
		$x \leq 24$	M8 / 12.9	6	35	150	—
500	2-stage	$24 < x \leq 38$	M10 / 12.9	8	79	—	—
		$x \leq 48$	M12 / 10.9	10	86	—	200
300	3-stage	$x \leq 38$	M10 / 12.9	8	79	200	—
		$38 < x \leq 48$	M12 / 12.9	10	135	—	—
500	3-stage	$x \leq 38$	M10 / 10.9	8	69	—	50
		$x \leq 24$	M8 / 12.9	6	39	150	—
500	4-stage	$24 < x \leq 38$	M10 / 12.9	8	79	—	—

Tbl-11: Specifications for fastening to a motor

9.1.3 Specifications for the TPK⁺ MA

Gearhead size TPK ⁺ MA	Clamping hub interior Ø "x" [mm]	Clamping screw (H)/ property class DIN ISO 4762	Width across flats [mm]	Tightening torque [Nm]	Max. axial force clamping hub [N]		
					Plug receptacle	Coupling	
010	2-stage	$x \leq 14$	M5 / 10.9	4	8.5	—	10
		$14 < x \leq 19$	M6 / 10.9	5	14	—	—
025	2-stage	$x \leq 19$	M6 / 10.9	5	14	—	20
		$19 < x \leq 28$	M8 / 10.9	6	35	—	—
050	2-stage	$x \leq 28$	M8 / 10.9	6	35	—	30
		$28 < x \leq 38$	M10 / 10.9	8	69	—	—
050	3-stage	$x \leq 19$	M6 / 10.9	5	14	—	20
		$19 < x \leq 28$	M8 / 10.9	6	35	—	—
050	4-stage	$x \leq 14$	M5 / 12.9	4	9.5	100	—
		$14 < x \leq 19$	M6 / 12.9	5	14	—	—

Gearhead size TPK ⁺ MA	Clamping hub interior Ø "x" [mm]	Clamping screw (H)/ property class DIN ISO 4762	Width across flats [mm]	Tightening torque [Nm]	Max. axial force clamping hub [N]		
					Plug receptacle	Coupling	
110	2-stage	x ≤ 38	M10 / 10.9	8	69	—	50
	3-stage	x ≤ 28	M8 / 10.9	6	35	—	30
		28 < x ≤ 38	M10 / 10.9	8	69	—	—
4-stage	x ≤ 19	M6 / 12.9	5	14	120	—	
	19 < x ≤ 28	M8 / 12.9	6	35	—	—	
300	2-stage	x ≤ 48	M12 / 10.9	10	86	—	200
	3-stage	x ≤ 38	M10 / 10.9	8	69	—	50
	4-stage	x ≤ 24	M8 / 12.9	6	35	150	—
24 < x ≤ 38		M10 / 12.9	8	79	—	—	
500	3-stage	x ≤ 48	M12 / 10.9	10	86	—	200
	4-stage	x ≤ 38	M10 / 12.9	8	79	200	—
		38 < x ≤ 48	M12 / 12.9	10	135	—	—
MA = HIGH TORQUE							

Tbl-12: Specifications for fastening to a motor

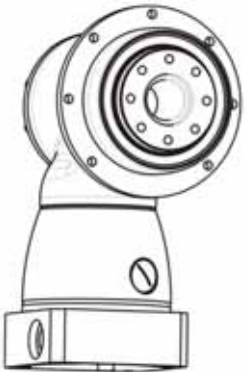
9.2 Specifications on fastening to a machine

Through-holes in gearhead housing				
Size / Design TK ⁺ /TPK ⁺	Hole circle Ø [mm]	Quantity x diameter [] x [mm]	For screw size / property class 12.9	Tightening torque [Nm]
004	79	8 x 4.5	M4	4.55
010	109	8 x 5.5	M5	9.0
010 MA	109	16 x 5.5	M5	9.0
025	135	8 x 5.5	M5	9.0
025 MA	135	16 x 5.5	M5	9.0
050	168	12 x 6.6	M6	15.4
050 MA	168	24 x 6.6	M6	15.4
110	233	12 x 9.0	M8	37.3
110 MA	233	24 x 9.0	M8	37.3
300	280	16 x 13.5	M12	126
300 MA	280	32 x 13.5	M12	126
500	310	16 x 13.5	M12	126
500 MA	285	32 x 13.5	M12	126
MA = HIGH TORQUE				

Tbl-13: Specifications on fastening to a machine

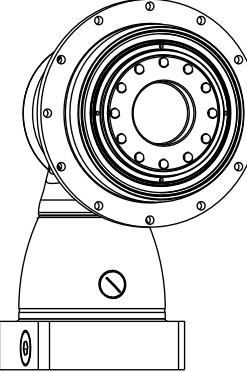
9.3 Specifications on mounting on the gear output side

9.3.1 Specifications for the TK⁺ version

	Size / Design TK ⁺	Hole circle Ø [mm]	Quantity x Thread x Depth [] x [mm] x [mm]	Tightening torque [Nm] Property class 12.9
	004	31.5	8 x M5 x 7	9.0
	010	50	8 x M6 x 10	15.4
	025	63	12 x M6 x 12	15.4
	050	80	12 x M8 x 15	37.3
	110	125	12 x M10 x 20	73.4

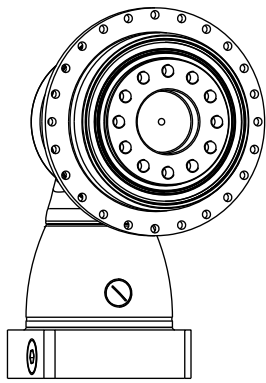
Tbl-14: Thread in output flange

9.3.2 Specifications for the TPK⁺ MF

	Size / Design TK ⁺ MF	Bore Ø [mm]	Quantity x Thread x Depth [] x [mm] x [mm]	Tightening torque [Nm] Property class 12.9
	010	50	8 x M6 x 10	15.4
	025	63	12 x M6 x 12	15.4
	050	80	12 x M8 x 15	37.3
	110	125	12 x M10 x 20	73.4
	300	140	12 x M16 x 31	310
	500	160	12 x M20 x 31	604

Tbl-15: Thread in output flange

9.3.3 Specifications for the TPK⁺ MA

	Size / Design TK ⁺ MF	Hole circle Ø [mm]	Quantity x Thread x Depth [] x [mm] x [mm]	Tightening torque [Nm] Property class 12.9
	010	50	12 x M6 x 10	15.4
	025	63	12 x M8 x 12	37.3
	050	80	12 x M10 x 15	73.4
	110	125	12 x M12 x 19	126
	300	145	12 x M20 x 31	604
	500	166	12 x M24 x 37	1042
MA = HIGH TORQUE				

Tbl-16: Thread in output flange

9.4 Tightening torques for common thread sizes in general mechanics

The specified tightening torques for headless screws and nuts are calculated values and are based on the following conditions:

- Calculation acc. VDI 2230 (Issue February 2003)
- Friction value for thread and contact surfaces $\mu=0.10$
- Exploitation of the yield stress 90 %

Property class Bolt / nut	Tightening torque [Nm] for threads												
	M3	M4	M5	M6	M8	M10	M12	M14	M16	M18	M20	M22	M24
8.8 / 8	1.15	2.64	5.24	8.99	21.7	42.7	73.5	118	180	258	363	493	625
10.9 / 10	1.68	3.88	7.69	13.2	31.9	62.7	108	173	265	368	516	702	890
12.9 / 12	1.97	4.55	9.00	15.4	37.3	73.4	126	203	310	431	604	821	1042

Tbl-17: Tightening torques for headless screws and nuts