



**WITTENSTEIN**

alpha

# HG<sup>+</sup> ATEX

Operating Manual



## Revision history

Revision	Date	Comment	Chapter
01	16.12.2009	New version	All
02	01.03.2010	Technical specifications	9.4.1
03	31.08.2010	2-stage design	1, 3, 5, 7, 9
03a	03.12.2012	Translation corrections	2.4, 7.3
04	16.05.2013	Shrink disk	2.7, 5.5

### Service

In case you have technical questions,  
please contact:

#### **WITTENSTEIN alpha GmbH**

Customer Service  
Walter-Wittenstein-Straße 1  
D-97999 Igersheim

Tel.: +49 7931 493-12900

Fax: +49 7931 493-10903

E-mail: [service-alpha@wittenstein.de](mailto:service-alpha@wittenstein.de)

### © WITTENSTEIN alpha GmbH 2013

This documentation is copyright protected.

**WITTENSTEIN alpha GmbH** reserves all the rights to photo-mechanical reproduction, copying, and the distribution by special processes (such as computers, file media, data networks), even in parts.

Subject to technical and content changes without notice..

## Contents

<b>1</b>	<b>Regarding this manual</b>	<b>3</b>
1.1	Signal words	3
1.2	Safety symbols	3
1.3	Design of the safety instructions	4
1.4	Information symbols	4
<b>2</b>	<b>Safety</b>	<b>5</b>
2.1	EC directive for devices and protective systems in areas with explosion hazards	5
2.2	Dangers	5
2.3	Personnel	5
2.4	Intended use	5
2.5	Reasonably predictable misuse	6
2.6	Guarantee and liability	6
2.7	General safety instructions	7
<b>3</b>	<b>Description of the gearhead</b>	<b>9</b>
3.1	Type plate	9
3.1.1	Atex identification in gas atmospheres with explosion hazard	10
3.1.2	Atex identification in dust-air atmosphere with explosion hazard	10
3.2	Ordering code	10
3.3	Performance statistics	10
3.4	Dimensioning	11
3.4.1	Inspection	11
3.5	Weight	11
3.6	Noise emission	11
<b>4</b>	<b>Transport and storage</b>	<b>12</b>
4.1	Scope of delivery	12
4.2	Packaging	12
4.3	Transport	12
4.3.1	Transport of gearheads up to and including size HG <sup>+</sup> 140	12
4.3.2	Transport of gearheads as of size HG <sup>+</sup> 180	12
4.4	Storage	12
<b>5</b>	<b>Assembly</b>	<b>13</b>
5.1	Preparations	13
5.2	Installation conditions	13
5.3	Mounting the motor onto the gearhead	13
5.4	Mounting gearhead on a machine	15
5.5	Mounted components on the gear output side	15
5.5.1	Mounting on the hollow output shaft with shrink disk (HG <sup>+</sup> )	15
5.5.2	Installing the shrink disk	17
<b>6</b>	<b>Startup and operation</b>	<b>18</b>
6.1	Note during startup	18
6.2	Inadmissible operational conditions	19
6.3	Check running-in behavior	19
<b>7</b>	<b>Maintenance and disposal</b>	<b>20</b>
7.1	Maintenance work	20
7.1.1	Visual/Noise inspection	20
7.1.2	Checking the tightening torques	20
7.1.3	Check for leakage	20
7.1.4	Replacing the gearhead	20
7.2	Startup after maintenance work	21
7.3	Maintenance schedule	21
7.4	Notes on the lubricant used	21
7.5	Disposal	21

<b>8 Malfunctions .....</b>	<b>22</b>
<b>9 Appendix .....</b>	<b>23</b>
9.1 Specifications on mounting onto a motor .....	23
9.2 Specifications on mounting onto a machine.....	24
9.3 Tightening torques for common thread sizes in general mechanics .....	24
9.4 Technical specifications .....	25
9.4.1 Technical specifications for HG <sup>+</sup> 060 for use in areas with explosion hazards.....	25
9.4.2 Technical specifications for HG <sup>+</sup> 075 for use in areas with explosion hazards.....	27
9.4.3 Technical specifications for HG <sup>+</sup> 100 for use in areas with explosion hazards.....	29
9.4.4 Technical specifications for HG <sup>+</sup> 140 for use in areas with explosion hazards.....	32
9.4.5 Technical specifications for HG <sup>+</sup> 180 for use in areas with explosion hazards.....	34
9.5 Lubricant quantity .....	36
9.6 Declaration of Conformity.....	37

# 1 Regarding this manual

These instructions contain necessary information for the safe operation of the angle gear HG<sup>+</sup> in areas with explosion hazards, referred to as gearhead in the following.

The operator must make sure that this operating manual is read through by all persons assigned to install, operate, or maintain the gearhead, and that they understand them.

Store these instructions within reach near the gearhead.

These **safety instructions** should be shared with colleagues working in the vicinity of the device to ensure individual safety.

The original instructions were prepared in German; all other language versions are translations of these instructions.

## 1.1 Signal words

The following signal words are used to bring your attention to dangers, prohibitions, and important information:

<b>⚠ DANGER</b>	This signal word points out to an imminent danger that can cause serious injuries and even death.
<b>⚠ WARNING</b>	This signal word points out to a possible danger that can cause serious injuries and even death.
<b>⚠ CAUTION</b>	This signal word points out to a possible danger that can cause slight to serious injuries.
<b>NOTICE</b>	This signal word points out to a possible danger that can cause material damage.
	A note without signal word draws your attention to application tips or especially important information when handling the gearhead.

## 1.2 Safety symbols

The following safety symbols are used to bring your attention to dangers, prohibitions, and important information:



General danger



Hot surface



Suspended loads



Danger of being pulled in



Environment protection



Information




Explosion



Electric voltage

### 1.3 Design of the safety instructions

The safety instructions of this operating manual are designed according to the following pattern:

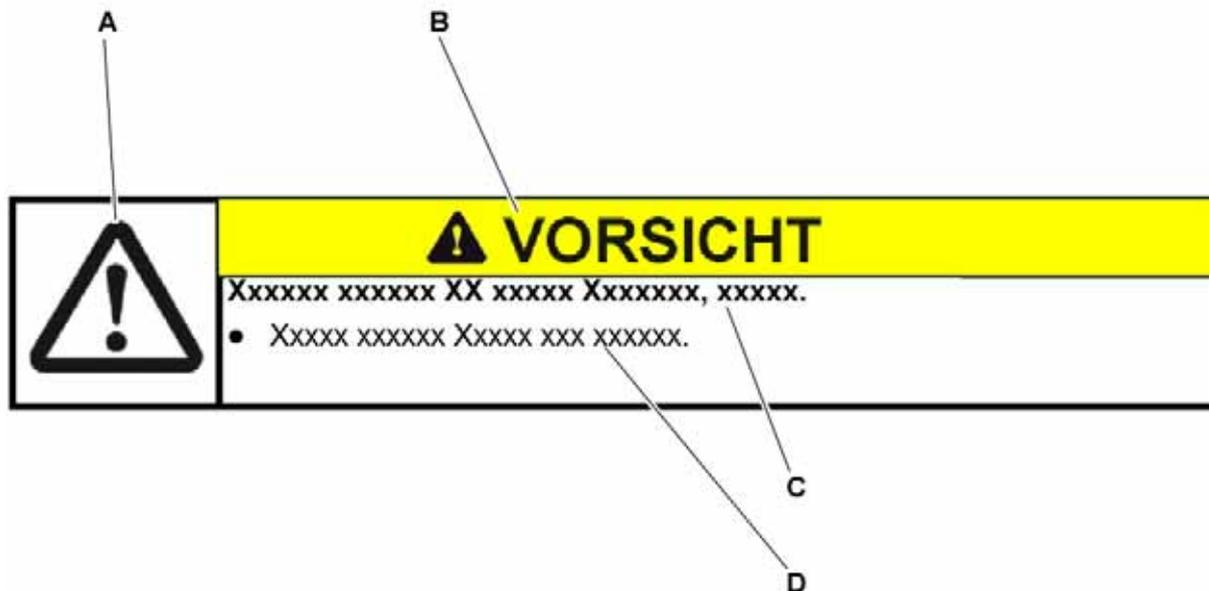

A = Safety symbol (see Chapter 1.2 "Safety symbols")

B = Signal word (see Chapter 1.1 "Signal words")

C = Type and consequence of the danger

D = Prevention of the danger

### 1.4 Information symbols

The following information symbols are used:

- requires you to carry out an action
  - ➡ indicates the results of an action
- ⓘ provides additional information on handling

 An "explosion protection symbol" indicates information on handling in areas with explosion hazards.

## 2 Safety

These instructions, especially the safety instructions and the rules and regulations valid for the operating site, must be observed by all persons working with the gearhead.

In addition to the safety specifications mentioned in this operating manual, the general and also the local regulations on the prevention of accidents and on environmental protection should be observed.

### 2.1 EC directive for devices and protective systems in areas with explosion hazards



Within terms of the EC machinery directive 94/9 EC, the gearhead is considered a device that is mounted together with other devices in a machine. A declaration of conformity for this gearhead can be found in the appendix (see Chapter 9.6 "Declaration of Conformity").

Operation is prohibited within the area of validity of the EC directive until it has been determined that the machine in which this product is installed corresponds to the regulations within this directive.

### 2.2 Dangers

The gearhead has been constructed according to current technological standards and accepted safety regulations.

To avoid danger to the operator or damage to the machine, the gearhead may be put to use only for its intended usage (see chapter 2.4 "Intended use") and in a technically flawless and safe state.

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

### 2.3 Personnel

Only persons who have read and understood these instructions may carry out work on the gearhead.

### 2.4 Intended use

The gearhead serves to convert torques and speeds. It is designed for industrial applications.



The gear reducer can be used in areas with explosion hazard group II, zones 1 and 2, and zones 22 and 21, thus in the device categories 2 and 3. The gearhead can be operated in a gas atmosphere in temperature class T3. In dust atmosphere, a maximum surface temperature of 150°C is possible.

- Observe the instructions on the type plate and the appendix on the written certificate of conformity.

The gearhead is manufactured and declared applying EN 13463 standards and the 94/9/EC directive for use in areas with explosion hazard.

- It is imperative that you observe the restrictions of speeds and torques (see Chapter 9.4 "Technical specifications").
- Please consult our Customer Service Department [technical customer service] if you have any questions or need explanations.



The gearhead is specified for installment on motors that:

- correspond to the design B5 (for any divergences, please consult our Customer Service Department [technical customer service])
  - show a radial and axial runout tolerance of at least “N” according to DIN 42955
  - have a smooth shaft
  - feature at least the same temperature class as the gearhead.
- ① We recommend temperature class T3 and higher, because the gearhead may not be permitted to heat up to more than 90 °C in normal conditions. The gearhead can be heated additionally through heat connection to the motor, and thus reach a higher housing temperature than 90 °C. The performance of our gearhead in explosion-risk areas would therefore no longer be guaranteed.

## 2.5 Reasonably predictable misuse



Any use transgressing the maximum permitted speeds, torques and temperature (especially ignoring the regulations on explosion protection) is not compliant with the regulations, and thus prohibited.

## 2.6 Guarantee and liability

Guarantee and liability claims are excluded for personal injury and material damage in case of

- Ignoring the information on transport and storage
- Improper use (misuse)
- Improper or neglected maintenance and repair
- Improper assembly / disassembly or improper operation
- Operation of the gearhead when safety devices and equipment are defective
- Operation of the gearhead without lubricant
- Operation of a heavily soiled gearhead
- Operating the gearhead despite leakage or unusual running noises



- Operating the gearhead in an atmosphere whose ignition temperature lies under the temperature class specified on the type plate.
- Modifications or reconstructions that have been executed without written approval of **WITTENSTEIN alpha GmbH**

2.7 General safety instructions

	<b>⚠ DANGER</b>
	<p><b>Operating the gearhead in areas for which it is not approved can lead to explosions that can cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• Make sure that the gearhead is only used in those areas for which it is permitted according to the identification plate (see Chapter 3.1 "Type plate").</li> </ul>
	<b>⚠ DANGER</b>
	<p><b>Assembly and maintenance in areas with explosion hazards can lead to explosions that can cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• Be certain that there is no explosive atmosphere during assembly and maintenance.</li> </ul>

	Table "Tbl-1" lists a summary of the possible hazards, their causes and protective measures for areas with explosion hazards.
---	---

	Dangers	Possible causes	Protective measures
	Hot surfaces	Increased friction and dissipated power because of wear, improper assembly, overload, or leaks.	Reduction of the torques and speeds in comparison to standard gears
			Limiting the motor current and maximum speed of the motor
			Maintenance intervals for wear parts and lubrication according to maintenance schedule
			Inspection of the temperature behavior and the running-in behavior before startup
			Regular visual and acoustic inspections
		Prohibition of certain mounting positions and conditions	
		Increased surface temperature because of dust deposits.	Cleaning regulations according to maintenance plan
	Mechanically caused sparks	Overload on shafts, moving parts and connection elements.	Reduction of the torques and external loads in comparison to standard gears
			Limiting the motor current of the motor
			Maximum load test before startup
	Electrostatic loading	Potential differences between components, cleaning processes, insulating layers	Grounding the gearhead and the motor

Tbl-1: Summary of the hazards and protective measures for areas with explosion hazards

	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>Objects flung out by rotating components can cause serious injuries.</b></p> <ul style="list-style-type: none"> <li>• Remove objects and tools from the gearhead before putting it into operation.</li> </ul>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>Rotating components on the gearhead can pull in parts of the body and cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• Keep a sufficient distance to rotating machinery while the gearhead is running.</li> <li>• Secure the machine against restarting and unintentional movements during assembly and maintenance work.</li> </ul>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>A damaged gearhead can cause accidents and injury.</b></p> <ul style="list-style-type: none"> <li>• Never use a gearhead that has been overloaded to due misuse or a machine crash (see chapter 2.5 "Reasonably predictable misuse").</li> <li>• Replace the affected gearhead, even if no external damage is visible.</li> </ul>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p><b>Hot gearhead housing can cause serious burns.</b></p> <ul style="list-style-type: none"> <li>• Touch the gearhead housing only when wearing protective gloves or after the gearhead has been at standstill for some time.</li> </ul>
	<p style="text-align: center;"><b>NOTICE</b></p> <p><b>Loose or overloaded screw connections can damage the gearhead.</b></p> <ul style="list-style-type: none"> <li>• Use a calibrated torque wrench to tighten and check all screw connections for which tightening torques have been specified.</li> </ul>
	<p><b>Solvents and lubricants can pollute soil and water.</b></p> <ul style="list-style-type: none"> <li>• Use and dispose of cleaning solvents as well as lubricants appropriately.</li> </ul>

### 3 Description of the gearhead

The gearhead is a single- or twostage, low-backlash right -angle gearhead, which is manufactured as standard in the "M" version (motor installation).


Motor centering is performed:

- up to gearhead size HG<sup>+</sup> 100 and a motor shaft diameter of 28 mm by the clamping hub or coupling
- from gearhead size HG<sup>+</sup> 140 and a motor shaft diameter of >28 mm by the centering collar of the motor

A radial distortion of the motor is avoided.

Adaptation to various motors is done by an adapter plate and a bushing.

The gearhead is equipped with an integrated linear length compensation to compensate for the expansion of the motor shaft when heated up.

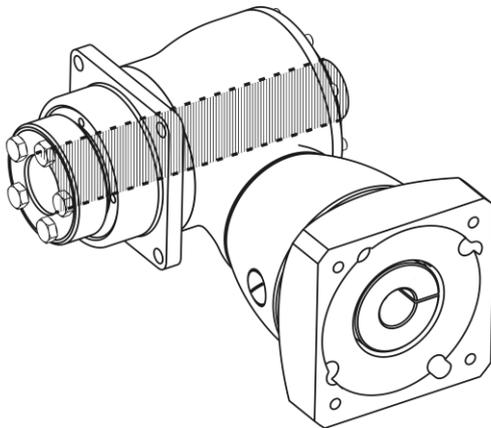

The hollow output shaft has a smooth design (without keyway). For the load shaft, we recommend the tolerance h6 (DIN ISO 286). The material should have a minimum yield stress of 385 N/mm<sup>2</sup>.

For varying applications, the gearhead is available with one or with two clampable shaft ends. The machine shaft is connected to the gearhead by means of a shrink disk.

#### 3.1 Type plate

The type plate is attached to the gearhead housing.

A	Ordering code (see Chapter 3.2 "Ordering code")	F	Production date
B	Ratio	G	Maximum permitted gear output torque $T_{2B}$
C	Lubricant	H	Maximum permitted drive speed $n_{1Max}$
D	Atex identification	I	CE identification
E	Serial number	J	Name and address of manufacturer

Tbl-2: Type plate (sample values)

3.1.1 ATEX identification in gas atmospheres with explosion hazard

		Designation
	L	Group, category
	M	Type of ignition protection, explosion group, temperature class
	N	Ambient temperature


Tbl-3: Type plate (sample values)

3.1.2 ATEX identification in dust-air atmosphere with explosion hazard

		Designation
	L	Group, category
	M	Type of ignition protection, maximum surface temperature
	N	Ambient temperature

Tbl-4: Type plate (sample values)

3.2 Ordering code

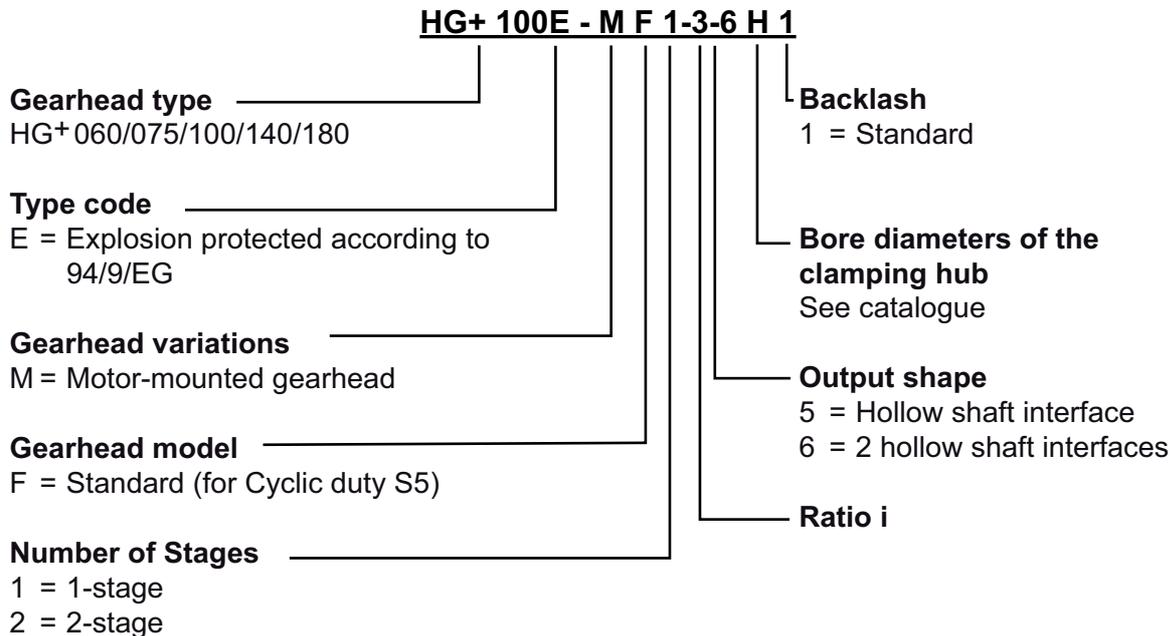

3.3 Performance statistics

Based on test results, torques and speeds are reduced in relation to the standard gearhead. The shaft loads are also reduced in relation to the standard gear. Refer to Chapter 9.4 "Technical specifications".

	⚠ DANGER
	<p><b>Deviant values can cause the loss of explosion protection.</b></p> <ul style="list-style-type: none"> <li>• If values are divergent, please consult our Customer Service.</li> </ul>

### 3.4 Dimensioning

	⚠ DANGER
	<p><b>Erroneous dimensioning and inspection may lead to loss of explosion protection.</b></p> <ul style="list-style-type: none"> <li>• Please observe all instructions in this chapter.</li> </ul>



- Adopt the construction according to specifications in the total catalogue, Chapter "Information" or "Detailed construction", or contact **WITTENSTEIN alpha GmbH**.
- Avoid lateral forces and bending torques on the shrink disk. If necessary, install external bearing points for the load shaft. In case of unclear installation situations, contact **WITTENSTEIN alpha GmbH**.
- Note the reduced output specifications in construction according to Chapter 9.4 "Technical specifications".
- Please consult our Customer Service Department if you have any questions.
- Note the instructions in Chapter 7.1.4 "Replacing the gearhead", if the calculated **bearing life is less than 20,000 h**.
- Prevent gearhead overloading by the motor by limiting motor current and motor speed.
- Clarify the chemical stability of the gearhead for every individual case so as to avoid a premature failure of a shaft seal or corrosion on the gearhead.  
This also includes water and steam, which can cause corrosion. Contact **WITTENSTEIN alpha GmbH** about this.

#### 3.4.1 Inspection



- Make sure that the connection of the motor to the gearhead corresponds to the required protection types (according to DIN 40050):
  - in dust atmosphere IP6x,
  - in gas atmosphere IP54.

- ① The required protection types can be achieved for example by the following measures:
- Use surface-bonding agent between motor flange and adapter plate.
  - Use sealing plates between motor flange and adapter plate to seal the through-holes of the adapter plate.

Sealing plates are available upon request from **WITTENSTEIN alpha GmbH**.

### 3.5 Weight

The table "Tbl-5" specifies the gearhead dimensions with medium-sized adaptor plate. If another adaptor plate is mounted, the actual dimensions can deviate by up to 10%.

Gearhead size HG <sup>+</sup>	060	075	100	140	180
<b>1-stage [kg]</b>	2,9	4,8	9,3	22,6	45,4
<b>2-stage [kg]</b>	3,2	5,1	9,5	24,0	47,0

Tbl-5: Weight

### 3.6 Noise emission

Depending on the gearhead type and product size, the continuous sound pressure level is up to 68 dB(A).

	<p><b>Specifications on your specific product can be found in Chapter 9.4 "Technical specifications".</b></p>
---	---

## 4 Transport and storage

### 4.1 Scope of delivery

- Check the completeness of the delivery against the delivery note.
  - ① Missing parts or damage must be notified immediately in writing to the carrier, the insurance, or **WITTENSTEIN alpha GmbH**.

### 4.2 Packaging

The gearhead is delivered packed in foil and cardboard boxes.

- Dispose of the packaging materials at recycling sites intended for that. Observe the locally valid regulations for disposals.

### 4.3 Transport

	NOTICE
	<p><b>Hard knocks, for instance because of falling or hard dropping, can damage the gearhead.</b></p> <ul style="list-style-type: none"> <li>• Only use hoisting equipment and transports with sufficient capacity.</li> <li>• The maximum permitted lift capacity of a hoist may not be exceeded.</li> <li>• Lower the gearhead slowly.</li> </ul>
	⚠ WARNING
	<p><b>Suspended loads can fall and can cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• Do not stand under suspended loads.</li> </ul>

Specifications on the weights, refer to Chapter 3.5 "Weight".

#### 4.3.1 Transport of gearheads up to and including size HG<sup>+</sup> 140

No special transport mode is prescribed for transporting the gearhead.

#### 4.3.2 Transport of gearheads as of size HG<sup>+</sup> 180

For gearheads as of size HG<sup>+</sup> 180 a support bore (A) is provided for a ring screw (e.g. acc. to DIN 580). The ring screw is used for secure attachment to hoisting equipment.

	Gearhead size HG <sup>+</sup>	Support bore (A) [Ø] x depth [mm]
	180	M8 x 14

Tbl-6: Support bore on the gearhead

### 4.4 Storage

Store the gearhead in horizontal position and dry surroundings at a temperature of 0 °C to +40 °C in the original packaging. Store the gearhead for a maximum of 2 years.

For storage logistics, we recommend the "first in – first out" method.

## 5 Assembly

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

### 5.1 Preparations

	NOTICE
	<p><b>Pressurized air can damage the gearhead seals.</b></p> <ul style="list-style-type: none"> <li>• Do not use pressurized air to clean the gearhead.</li> </ul>

	NOTICE
	<p><b>Directly sprayed cleaning agents can alter the frictional values of the clamping hub.</b></p> <ul style="list-style-type: none"> <li>• Only spray cleaning agents onto a cloth, with which you can then clean the clamping hub.</li> </ul>

- Clean / De-grease the following components with a clean and lint-free cloth and grease-dissolving, non-aggressive detergent:
  - All fitting surfaces to neighboring components
  - Centering
  - The motor shaft
  - The inside diameter of the clamping hub
  - The bushing inside and out
- Dry all fitting surfaces to neighboring components in order to achieve the proper friction values of the screw connections.
- Check the fitting surfaces additionally for damage and impurities.


### 5.2 Installation conditions

- |   |   |
|---|---|
|  | <ul style="list-style-type: none"> <li>• Provide a metallic frame for connection of the gear reducer.</li> <li>• Provide a ground in the areas of the motor gear and gear-gear connection, so as to prevent any electrostatic charge that may arise.</li> </ul> |
|---|---|

### 5.3 Mounting the motor onto the gearhead

	⚠ WARNING
	<p><b>A damaged coupling can cause ignition dangers.</b></p> <ul style="list-style-type: none"> <li>• Align the shaft ends of the motor and gearhead precisely. The offset values in table "Tbl-9" must <b>definitely</b> be maintained.</li> </ul>
	<ul style="list-style-type: none"> <li>• Observe the general information and safety instructions of the motor manufacturer.</li> <li>• Observe the safety and processing instructions of the screw-bonding agents to be used.</li> </ul>

- ① Ensure that the motor is mounted if possible in a vertical direction.

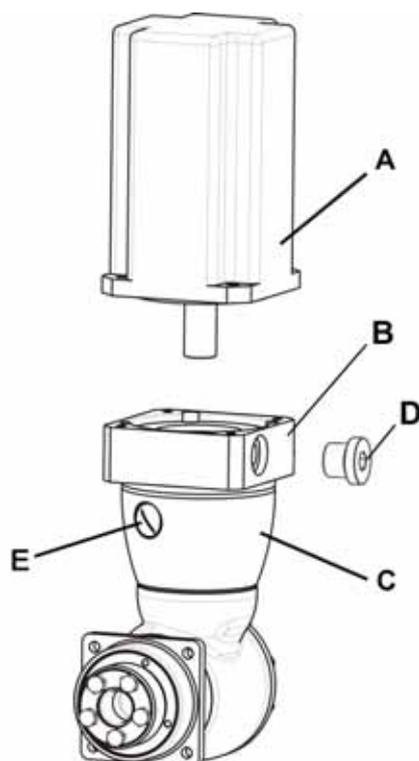

- If the motor shaft has a feather key, remove the feather key.
  - ① If recommended by the motor manufacturer, apply a half wedge.
- Remove the plug (D) from the mounting bore in the adaptor plate (B).
- Under **no circumstance** remove the plug (E) in the **housing**.
- Turn the clamping hub (I) until the clamping bolt (H) can be reached over the mounting bore.
- Release the clamping bolt (H) of the clamping hub (I) with one revolution.
- Push the motor shaft into the clamping hub of the gearhead.
  - ① The motor shaft should slip in easily. If this is not the case, the clamping bolt must be loosened more.
  - ① A slotted spacer sleeve has to be installed extra for certain motor shaft diameters and applications.
  - ① The slot of the spacer sleeve (if provided) and clamping hub have to be flush with the groove (if provided) of the motor shaft, see table "Tbl-7".
  - ① No gap is premitted between motor (A) and the adaptor plate (B).

		Designation	
		H	Clamping bolt
		I	Clamping hub
		J	Spacer sleeve
		K	Grooved shaft
		L	Smooth shaft

Tbl-7: Arrangement of motor shaft, clamping hub and spacer sleeve

- Apply screw-bonding agent to the four screws (e.g. Loctite 243).
- Fasten the motor (A) onto the adaptor plate (B) with the four screws.
- If it concerns a **single stage gearhead (MF1)** , smear screw-bonding agent (for example Loctite 243) onto the clamping bolt (H).
- Tighten the clamping bolt (H) of the clamping hub (I).
  - ① For screw sizes and specified torques refer to chapter 9.1 "Specifications on mounting onto a motor", table "Tbl-17".
- Screw in plug (D) of the adaptor plate (B).
  - ① For screw sizes and specified torques refer to table "Tbl-8".

<b>Width across flats [mm]</b>	<b>5</b>	<b>8</b>	<b>10</b>
<b>Tightening torque [Nm]</b>	10	35	50

Tbl-8: Torques for the plugs

<b>Gearhead size HG<sup>+</sup></b>	<b>060</b>	<b>075</b>	<b>100</b>	<b>140</b>	<b>180</b>
<b>Axial offset [mm]</b>	± 0,25	± 0,3	± 0,4	± 0,5	± 0,6
<b>Angle offset [°]</b>	0,2	0,2	0,2	0,2	0,2

Tbl-9: Permissible offset of the coupling, gearhead singlestaged (MF1)

#### 5.4 Mounting gearhead on a machine

	<ul style="list-style-type: none"> <li>Observe the safety and processing instructions of the screw-bonding agents to be used.</li> </ul>
--	--

- Smear screw-bonding agent (e.g. Loctite 243) onto the fastening bolts.
- Fasten the gearhead on the machine with the bolts through the holes.
  - ① Mount the gearhead in such a way that the type plate remains legible.
  - ① Do not use washers (e.g. plain washers, tooth lock washers).
  - ① For screw sizes and specified torques refer to chapter 9.2 "Specifications on mounting onto a machine", table "Tbl-18".

#### 5.5 Mounted components on the gear output side

##### 5.5.1 Mounting on the hollow output shaft with shrink disk (HG<sup>+</sup>)

The hollow output shaft is axially secured to the load shaft by means of a shrink disk connection. If a shrink disk was ordered, it is already installed on the hollow output shaft.

- ① If a separately supplied shrink disk should be installed, read the information in Chapter 5.5.2 "Installing the shrink disk".



- Please note that for use in explosion hazards areas, only shrink disks from **WITTENSTEIN alpha GmbH** are approved (see Table "Tbl-10").
  - ① For more information and orders, please contact **WITTENSTEIN alpha GmbH**.
- For damages that are caused by using unapproved shrink disks, no warranty or liability is assumed. Observe the manufacturer instructions when installing a shrink disk.

<b>Gearhead size HG<sup>+</sup></b>	<b>060</b>	<b>075</b>	<b>100</b>	<b>140</b>	<b>180</b>
<b>Shrink disk</b>	SD 018x044	SD 024x050	SD 036x072	SD 050x090	SD 068x115

Tbl-10: Shrink disk assignment

① The material of the shrink disk is specified in the article code (AC) (see Table "Tbl-12"). Depending on the material of the shrink disk, the load shaft has to meet the following conditions:

	<b>Material of the shrink disk</b>		
	<b>Standard</b>	<b>Nickel-plated</b>	<b>Stainless steel</b>
<b>Minimum yield stress [N/mm<sup>2</sup>]</b>	≥ 385	≥ 260	≥ 260
<b>Surface roughness Rz [µm]</b>	≤ 16		
<b>Tolerance</b>	h6		

Tbl-11: Features of the load shaft


	<b>NOTICE</b>
	<p><b>Dirt can inhibit transmission of the torque.</b></p> <ul style="list-style-type: none"> <li>Do not disassemble the shrink disk prior to installation.</li> <li>De-grease the load shaft and the hollow output shaft's bore leaving no residual traces in the area of the shrink disk seat.</li> </ul>

① Only the exterior surface of the hollow output shaft may be greased in the area of the shrink disk seat.

	<b>NOTICE</b>
	<p><b>The forces of the shrink disk can deform the hollow output shaft.</b></p> <ul style="list-style-type: none"> <li>Always install the load shaft first before tightening the clamping screws of the shrink disk.</li> </ul>

- Push the hollow output shaft onto the load shaft by hand.

	<b>NOTICE</b>
	<p><b>Incorrectly aligned shafts can lead to damage.</b></p> <ul style="list-style-type: none"> <li>Ensure that the hollow output shaft is aligned with the load shaft.</li> <li>Mount the hollow output shaft onto the load shaft without using force.</li> <li>Do not on any account attempt an assembly by hammering or applying pressure.</li> </ul>

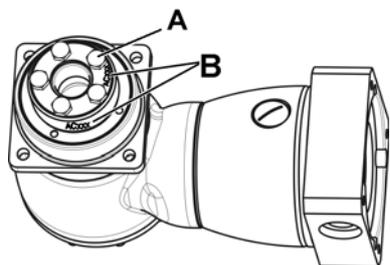

The article code (B) is located, depending on the design, on the front side or the circumference of the shrink disk.

- Refer to the article code to determine the material of the shrink disk.
- Tighten the clamping screws (A) of the shrink disk evenly distributed in multiple circular passes.
- Tighten the individual clamping screws only up to the maximum permitted tightening torque.

① For screw sizes and specified tightening torques, see Table "TbI-12".

Material of the shrink disk: Standard			
Gearhead size HG <sup>+</sup>	Article code (AC)	Tightening torque	Clamping screw thread
<b>060</b>	20000744	12 Nm	M6
<b>075</b>	20001389	12 Nm	M6
<b>100</b>	20001391	30 Nm	M8
<b>140</b>	20001394	30 Nm	M8
<b>180</b>	20001396	30 Nm	M8

Material of the shrink disk: Nickel-plated			
Gearhead size HG <sup>+</sup>	Article code (AC)	Tightening torque	Clamping screw thread
060	20048496	7.5 Nm	M6
075	20047957	7.5 Nm	M6
100	20048497	34 Nm	M8
140	20048498	34 Nm	M8
180	20048499	34 Nm	M8
Material of the shrink disk: Stainless steel			
Gearhead size HG <sup>+</sup>	Article code (AC)	Tightening torque	Clamping screw thread
060	20048491	7.5 Nm	M6
075	20043198	7.5 Nm	M6
100	20035055	16 Nm	M8
140	20047937	16 Nm	M8
180	20048492	16 Nm	M8

Tbl-12: Tightening torques for clamping screws of the supplied shrink disk

- Check that the clamping screws (A) have the maximum tightening torque, going through in sequence twice.
- Mount a protective cover (not included in the scope of delivery) to protect the shrink disk from falling foreign particles.

### 5.5.2 Installing the shrink disk

- ① The removed shrink disk does not need to be disassembled and regreased prior to bracing again. It is only necessary to disassemble and clean the shrink disk when it is dirty.

	NOTICE
	<p><b>Cleaned shrink disks can have other coefficients of friction. This can lead to damage during mounting.</b></p> <ul style="list-style-type: none"> <li>• Lubricate the inner smooth surfaces of the shrink disk using a solid lubricant with a coefficient of friction of <math>\mu = 0.04</math>.</li> </ul>

- ① The following lubricants are permissible for relubricating the shrink disk:

Lubricant	Commercial form	Manufacturer
<b>Molykote 321 R (lubricating varnish)</b>	spray	DOW Corning
<b>Molykote Spray (powder spray)</b>	spray	DOW Corning
<b>Molykote G Rapid</b>	spray or paste	DOW Corning
<b>Aemasol MO 19 P</b>	spray or paste	A. C. Matthes
<b>Unimoly P 5</b>	powder	Klüber Lubrication

Tbl-13: Lubricants for relubricating the shrink disk

- Push the shrink disk onto the hollow shaft.
- ① Only the exterior surface of the hollow shaft may be greased in the area of the shrink disk seat.
- Observe the further instructions given in Chapter 5.5.1 "Mounting on the hollow output shaft with shrink disk (HG+)".

## 6 Startup and operation

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

	⚠ DANGER
	<p><b>Operating the gearhead in areas for which it is not approved can lead to explosions that can cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• Make sure that the gearhead is only used in those areas for which it is permitted according to the identification plate (see Chapter 3.1 "Type plate").</li> </ul>

- Check the gearhead before startup for possible damage, especially the radial shaft seal on the gear output.


	⚠ DANGER
	<p><b>A damaged gearhead can lead to explosions that can cause serious injuries and even death.</b></p> <ul style="list-style-type: none"> <li>• <b>Never</b> operate damaged or abnormally running or sounding gearheads in an area of explosion hazard.</li> </ul>

### 6.1 Note during startup




**Improper use can cause damage to the gearhead and cause ignition dangers.**


- Make sure that
  - the **ambient temperature** does not drop below 0 °C or exceed +40 °C and
  - the **operating temperature** does not exceed +90 °C.
  - the gearhead is mounted in the mounting positions depicted below to ensure the lubrication of all gearhead components.
- For other conditions of use and other mounting positions as those depicted below (e.g. tilting by an axis of these mounting positions), please consult our Customer Service Department.

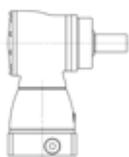


Mounting position B5/V3 (output shaft horizontal, motor shaft upwards)

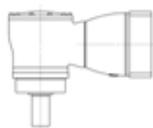

Mounting position V1/B5 (output shaft downwards, motor shaft horizontal)

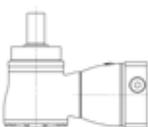

Mounting position V3/B5 (output shaft upwards, motor shaft horizontal)




Mounting position B5/B5 (output shaft horizontal, motor shaft horizontal)



- Prevent gear reducer from overloading by limiting the motor current and the maximum motor speed. Otherwise, the drive output should be switched off in case the motor temperature rises 10 °C above the usual operational temperature.
- Use the gearhead only in a clean and dry environment. Please consult our Customer Service Department if your gearhead is subjected to course dust or any kind of liquids during operation.


## 6.2 Inadmissible operational conditions

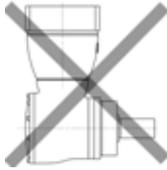

**The following operational conditions are not permitted:**

- Mounting position B5/V1 (output shaft horizontal, motor shaft downwards)
- Co-riding the gearhead on the drive axle is prohibited. Exceptions require a written approval and technical statement from **WITTENSTEIN alpha GmbH**.
- Use during permanent operation (S1 operation: power-on time greater than 60% or longer than 20 minutes)

## 6.3 Check running-in behavior

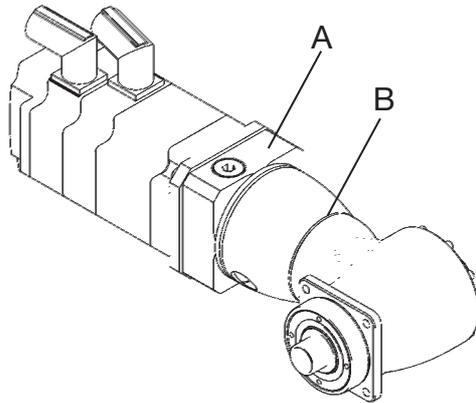

- After 4 running hours in maximum operating conditions, check the gearhead for leakage between gear and gearhead and on the output shaft seal.
- Measure the surface temperature on the input flange (A) and on the housing (B). Consult our Customer Service Department if the temperature exceeds +90 °C.
- Check the proper assembly of the clamping hub before startup by a maximum load test.

Increased running noises may be caused by faulty motor mounting.

- If so, mount onto motor again according to the operating manual, or consult our Customer Service Department.

## 7 Maintenance and disposal

- Be informed of the general safety instructions before beginning work. (see Chapter 2.7 "General safety instructions").

### 7.1 Maintenance work



The following maintenance work is crucial for the explosion protection.

- Perform these tasks thoroughly and diligently.

#### 7.1.1 Visual/Noise inspection

- Dust off the housing. Make sure that the deposit of dust layers on the housing never exceeds a layer thickness of 5 mm.
  - Check the entire gearhead for exterior damage and corrosion.
  - Check the clamping hub for external damage when you inspect the tightening torques of the clamping bolt.
  - Check the gearhead for unusual running noises and vibrations during operation.
- ① Please contact our Customer Service if you have any questions regarding maintenance.

#### 7.1.2 Checking the tightening torques

- Check the tightening torque of the fastening bolts on the gearhead housing.
  - ① You can find the prescribed tightening torques in chapter 9.2 "Specifications on mounting onto a machine", table "Tbl-18".
- Check the tightening torque of the clamping bolt on the motor mounting.
  - ① You can find the prescribed tightening torques in chapter 9.1 "Specifications on mounting onto a motor", table "Tbl-17".

#### 7.1.3 Check for leakage

- Check the gear output radial shaft seal for leakage.
- Look for external emission of lubricant from the drive.

	<p>⚠ DANGER</p>
	<p><b>When opening up the Ermeto coupling, dust could collect on the adapter plate and catch fire during later operation.</b></p> <ul style="list-style-type: none"> <li>• Make sure that <b>no</b> explosive dust-air mixture is present and <b>no</b> dust can get into adapter plate before opening the Ermeto coupling or dismantling the motor.</li> </ul>

- Open up the Ermeto screw connection in the adapter plate and check for any lubricant emission inside the adapter plate.
- If you detect a leak, remove the lubricant and check the inside of the adapter plate once more after a brief operation. Lubricant discharge should stop after a short time.
- In case lubricant still is emitted, shut down the gearhead and consult our Customer Service.

#### 7.1.4 Replacing the gearhead

- Replace the gearhead:
    - When 90 % of the calculated life of the gear output bearing has been reached (see "Cymex®" design or total catalogue: Chapter "Information" or "Detailed construction").
    - At the latest after a total of 20,000 operating hours.
- ① Alternatively, the gearhead can be checked by **WITTENSTEIN alpha GmbH** and if necessary, released for further operation.

**7.2 Startup after maintenance work**

- Clean the outside of the gearhead.
- Attach all safety devices.
- Do a trial run before releasing the gearhead again for operation.

**7.3 Maintenance schedule**

Maintenance work	At initial startup	After running-in (4 hours)	After every 500 operating hours or 3 months	Every 5,000 operating hours	Every 10,000 operating hours
Visual/Noise inspection	X	X	X	-	-
Checking the tightening torques	X	X	X	-	-
Check running-in behavior (see Chapter 6.3 "Check running-in behavior")	-	X	-	-	-
Check for leakage	X	X	X	-	-
Exchange the radial shaft seal on the drive <sup>1)</sup>	-	-	-	X	-
Exchange the radial shaft seal on gear output <sup>1)</sup>	-	-	-	-	X
Perform an oil change <sup>1)</sup>	-	-	-	X	-
<b>Replace gearhead</b> after reaching 90% of the calculated nominal bearing life, but at the <b>latest</b> after 20,000 operating hours.					
<sup>1)</sup> Please consult our Customer Service Department concerning this. You will receive the necessary documents, spare parts, information and upon request training by our Customer Service.					

Tbl-14: Maintenance schedule

**7.4 Notes on the lubricant used**

	<p><b>All gearheads are filled by the manufacturer with synthetic gear oil (polyglycols) of viscosity class ISO VG100, ISO VG220.</b></p> <p><b>The lubricant type and quantity can be found in the chapter 9.5 "Lubricant quantity".</b></p>
---	---

The lubricant level lies within its minimal and maximum values in any approved mounting position with the correct lubricant quantity. The maximum usual pressure that may prevail in the gearhead during operation lies at 0.5 bar.

- ① You can receive further information on the lubricants directly from the manufacturer:  
 Castrol Industrie GmbH, Mönchengladbach  
 Tel.: + 49 (0) 21 61 / 9 09 - 30

**7.5 Disposal**

Consult our Customer Service Department for supplementary information on exchanging the adapter plate, on disassembly, and on disposal of the gearhead.

- Dispose of the gearhead at the recycling sites intended for this purpose.
- ① Observe the locally valid regulations for disposals.

## 8 Malfunctions


	NOTICE
<p><b>Changed operational behavior can be an indication of existing damage to the gearhead or cause damage to the gearhead.</b></p> <ul style="list-style-type: none"> <li>Do not put the gearhead back into operation until the cause of the malfunction has been rectified.</li> </ul>	
	<p>Rectifying of malfunctions may be done by only by especially trained technicians.</p>

Fault	Possible cause	Solution
Increased operating temperature	The gearhead is not suited for the task.	Check the technical specifications.
	Motor is heating the gearhead.	Check the wiring of the motor.
		Ensure adequate cooling.
	Change the motor.	
Increased noises during operation	Ambient temperature too high.	Ensure adequate cooling.
	Distortion in motor mounting	Please consult our Customer Service Department.
	Damaged bearings	
Damaged gear teeth		
Loss of lubricant	Lubricant quantity too high	Wipe off discharged lubricant and continue to watch the gearhead. Lubricant discharge must stop after a short time.
	Seals not tight	Please consult our Customer Service Department.
Clamp connection is slipping	Clamping bolt not tightened properly	Check the shaft seat and hub bore for damages. Replace damaged parts. Check the screw for proper tightening torque and secure it against loosening by itself. Check the operating parameters.
	Operating parameters not maintained	
Metal bellows of the coupling broken	Operating parameters do not meet the requirements	Please consult our Customer Service Department.
	Operating errors of the plant unit	

TbI-15: Malfunctions

## 9 Appendix

### 9.1 Specifications on mounting onto a motor

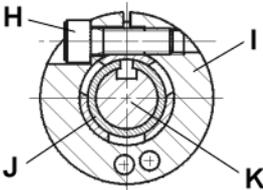		Designation
	H	Clamping bolt
	I	Clamping ring (part of the clamping hub)
	J	Bushing
	K	Shaft

Tbl-16: Arrangement of motor shaft, clamping hub, and bushing

Gearhead size HG <sup>+</sup>		Clamping hub interior Ø "x" [mm]	Clamping bolt / property class DIN ISO 4762	Width across flats [mm]	Tightening torque [Nm]	max. axial force clamping hub [N]	
						Plug-in terminal	Coupling
<b>060</b>	1-stage	$x \leq 14$ $14 < x \leq 19$	M5 / 10.9 M6 / 10.9	4 5	8,5 14	—	10
	2-stage	$x \leq 11$ $11 < x \leq 14$	M4 / 12.9 M5 / 12.9	3 4	4,1 9,5	80	—
<b>075</b>	1-stage	$\leq 19$ $19 < x \leq 28$	M6 / 10.9 M8 / 10.9	5 6	14 35	—	20
	2-stage	$x \leq 14$ $14 < x \leq 19$	M5 / 12.9 M6 / 12.9	4 5	9,5 14	100	—
<b>100</b>	1-stage	$\leq 28$ $28 < x \leq 38$	M8 / 10.9 M10 / 10.9	6 8	35 69	—	30
	2-stage	$x \leq 19$ $19 < x \leq 28$	M6 / 12.9 M8 / 12.9	5 6	14 35	120	—
<b>140</b>	1-stage	$x \leq 38$	M10 / 10.9	8	69	—	50
	2-stage	$x \leq 24$ $24 < x \leq 38$	M8 / 12.9 M10 / 12.9	6 8	35 79	150	—
<b>180</b>	1-stage	$x \leq 48$	M12 / 10.9	10	86	—	200
	2-stage	$x \leq 38$ $38 < x \leq 48$	M10 / 12.9 M12 / 12.9	8 10	79 135	200	—

Tbl-17: Specifications on mounting onto a motor

## 9.2 Specifications on mounting onto a machine

Gearhead size HG <sup>+</sup>	Bolt circle Ø [mm]	Bore Ø [mm]	Screw size / property class	Tightening torque [Nm]
<b>060</b>	68	5.5	M5 / 12.9	9
<b>075</b>	85	6.6	M6 / 12.9	15.4
<b>100</b>	120	9.0	M8 / 12.9	37.3
<b>140</b>	165	11.0	M10 / 12.9	73.4
<b>180</b>	215	13.0	M12 / 12.9	126

Tbl-18: Specifications on mounting onto a machine

## 9.3 Tightening torques for common thread sizes in general mechanics

The specified tightening torques for headless screws and nuts are calculated values and are based on the following conditions:

- Calculation acc. VDI 2230 (Issue February 2003)
- Friction value for thread and contact surfaces  $\mu=0.10$
- Exploitation of the yield stress 90 %

Property class Bolt / nut	Tightening torque [Nm] for threads												
	M3	M4	M5	M6	M8	M10	M12	M14	M16	M18	M20	M22	M24
<b>8.8 / 8</b>	1.15	2.64	5.24	8.99	21.7	42.7	73.5	118	180	258	363	493	625
<b>10.9 / 10</b>	1.68	3.88	7.69	13.2	31.9	62.7	108	173	265	368	516	702	890
<b>12.9 / 12</b>	1.97	4.55	9.00	15.4	37.3	73.4	126	203	310	431	604	821	1042

Tbl-19: Tightening torques for headless screws and nuts

## 9.4 Technical specifications

### 9.4.1 Technical specifications for HG<sup>+</sup> 060 for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 060, 1-stage						
Ratio		3	4	5	7	10
<b>Max. acceleration torque T<sub>2B</sub></b> (max. 1000 cycles per hour)	<b>Nm</b>	24	24	24	20	16
	<b>in.lb</b>	212	212	212	177	142
<b>Nominal torque at gear output T<sub>2N</sub></b> (At n <sub>1N</sub> )	<b>Nm</b>	17.5	17.5	17.5	16	12
	<b>in.lb</b>	155	155	155	142	106
<b>Emergency-stop torque T<sub>2Not</sub></b> (1000 times possible during the lifespan of the gearhead)	<b>Nm</b>	40	40	40	40	40
	<b>in.lb</b>	354	354	354	354	354
<b>Permissible medium drive speed in n<sub>1N</sub></b> (At T <sub>2N</sub> )	<b>rpm</b>	1800	1900	2200	2200	2200
<b>Max. continuous speed n<sub>1Ncym</sub></b> (At 20% T <sub>2N</sub> )	<b>rpm</b>	2000	2300	2800	2400	2400
<b>Max. drive speed n<sub>1Max</sub></b>	<b>rpm</b>	6000	6000	6000	6000	6000
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	1.3	1.2	1.1	1.3	1.2
	<b>in.lb</b>	11.5	10.6	9.7	11.5	10.6
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	< 5				
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	2.2	2.3	2.4	2.2	1.9
	<b>in.lb/arcmin</b>	19	20	21	19	17
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	1650				
	<b>lbf</b>	371				
<b>Life L<sub>n</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"				
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	2.9				
	<b>lbm</b>	6.4				
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	< 64				
<b>Max. permissible housing temperature</b>	<b>°C</b>	90				
	<b>F</b>	194				
<b>Ambient temperature</b>	<b>°C</b>	0 to +40				
	<b>F</b>	32 to 104				
<b>Paint</b>		Blue RAL 5002				
<b>Direction of rotation</b>		Drive and gear output counter-directional				
<b>Protection class</b>		IP 65				
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 14 mm	<b>kgcm<sup>2</sup></b>	0.52	0.44	0.40	0.36	0.34
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	0.46	0.39	0.35	0.32	0.30
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 19 mm	<b>kgcm<sup>2</sup></b>	0.87	0.79	0.75	0.71	0.70
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	0.77	0.70	0.66	0.63	0.62

<sup>a</sup> No-load running torques diminish during operation  
<sup>b</sup> Based on the shaft or flange center at the gear output

TbI-20: HG<sup>+</sup> 060, 1-stage: Technical specifications for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 060, 2-stage												
Ratio		12	16	20	25	28	35	40	50	70	100	
<b>Max. acceleration torque T<sub>2B</sub></b> (max. 1000 cycles per hour)	<b>Nm</b>	24	24	24	24	24	24	24	24	20	16	
	<b>in.lb</b>	212	212	212	212	212	212	212	212	177	142	
<b>Nominal torque at gear output T<sub>2N</sub></b> (At n <sub>1N</sub> )	<b>Nm</b>	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	16	12	
	<b>in.lb</b>	155	155	155	155	155	155	155	155	142	106	
<b>Emergency-stop torque T<sub>2Not</sub></b> (1000 times possible during the lifespan of the gearhead)	<b>Nm</b>	40	40	40	40	40	40	40	40	40	40	
	<b>in.lb</b>	354	354	354	354	354	354	354	354	354	354	
<b>Permissible medium drive speed in n<sub>1N</sub></b> (At T <sub>2N</sub> )	<b>rpm</b>	3150	3150	3150	3150	3150	3150	3150	3150	3450	3950	
<b>Max. continuous speed n<sub>1Ncym</sub></b> (At 20% T <sub>2N</sub> )	<b>rpm</b>	3600	3600	3600	3600	3600	3600	3600	3600	3950	3950	
<b>Max. drive speed n<sub>1Max</sub></b>	<b>rpm</b>	6000	6000	6000	6000	6000	6000	6000	6000	6000	6000	
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.1	0.1	0.1	
	<b>in.lb</b>	1.8	1.8	1.8	1.8	1.8	1.8	1.8	0.9	0.9	0.9	
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	≤ 5										
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	2.0	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.4	2.2	1.9
	<b>in.lb/arcmin</b>	20	20	20	20	20	20	20	20	21	19	17
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	1650										
	<b>lbf</b>	371										
<b>Life L<sub>h</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"										
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	3.2										
	<b>lbm</b>	7.1										
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	≤ 64										
<b>Max. permissible housing temperature</b>	<b>°C</b>	+90										
	<b>F</b>	194										
<b>Ambient temperature</b>	<b>°C</b>	0 to +40										
	<b>F</b>	32 to 104										
<b>Paint</b>		Blue RAL 5002										
<b>Direction of rotation</b>		Drive and gear output counter-directional										
<b>Protection class</b>		IP 65										

Technical specifications for HG <sup>+</sup> 060, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 11 mm	<b>kgcm<sup>2</sup></b>	0.09	0.09	0.07	0.07	0.06	0.06	0.06	0.06	0.06	0.06
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	0.08	0.08	0.07	0.06	0.06	0.06	0.05	0.05	0.05	0.05
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 14 mm	<b>kgcm<sup>2</sup></b>	0.20	0.20	0.19	0.19	0.18	0.18	0.17	0.17	0.17	0.17
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	0.18	0.18	0.17	0.16	0.16	0.16	0.15	0.15	0.15	0.15
<sup>a</sup> No-load running torques diminish during operation <sup>b</sup> Based on the shaft or flange center at the gear output											

Tbl-21: HG<sup>+</sup> 060, 2-stage: Technical specifications for use in areas with explosion hazards

### 9.4.2 Technical specifications for HG<sup>+</sup> 075 for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 075, 1-stage						
Ratio		3	4	5	7	10
<b>Max. acceleration torque T<sub>2B</sub></b> (max. 1000 cycles per hour)	<b>Nm</b>	70	70	70	60	50
	<b>in.lb</b>	620	620	620	531	443
<b>Nominal torque at gear output T<sub>2N</sub></b> (At n <sub>1N</sub> )	<b>Nm</b>	50	50	50	45	40
	<b>in.lb</b>	443	443	443	398	354
<b>Emergency-stop torque T<sub>2Not</sub></b> (1000 times possible during the lifespan of the gearhead)	<b>Nm</b>	95	95	95	95	95
	<b>in.lb</b>	841	841	841	841	841
<b>Permissible medium drive speed in n<sub>1N</sub></b> (At T <sub>2N</sub> )	<b>rpm</b>	2100	2200	2500	2500	2500
<b>Max. continuous speed n<sub>1Ncym</sub></b> (At 20% T <sub>2N</sub> )	<b>rpm</b>	2400	2800	3300	2800	2800
<b>Max. drive speed n<sub>1Max</sub></b>	<b>rpm</b>	6000	6000	6000	6000	6000
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	2.2	1.9	1.7	2.2	2.0
	<b>in.lb</b>	19	17	15	19	18
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	≤ 4				
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	5.3	5.9	6.7	6.6	6.5
	<b>in.lb/arcmin</b>	47	52	60	58	57
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	2350				
	<b>lbf</b>	529				
<b>Life L<sub>h</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"				
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	4.8				
	<b>lbm</b>	10.6				
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	≤ 66				
<b>Max. permissible housing temperature</b>	<b>°C</b>	+90				
	<b>F</b>	194				

Technical specifications for HG <sup>+</sup> 075, 1-stage						
Ratio		3	4	5	7	10
Ambient temperature	°C	0 to +40				
	F	32 to 104				
Paint		Blue RAL 5002				
Direction of rotation		Drive and gear output counter-directional				
Protection class		IP 65				
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 19 mm	kgcm <sup>2</sup>	1.46	1.19	1.06	0.95	0.90
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	1.29	1.05	0.94	0.84	0.79
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 28 mm	kgcm <sup>2</sup>	2.86	2.60	2.47	2.36	2.31
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	2.53	2.30	2.19	2.09	2.04
<sup>a</sup> No-load running torques diminish during operation						
<sup>b</sup> Based on the shaft or flange center at the gear output						

TbI-22: HG<sup>+</sup> 075, 1-stage: Technical specifications for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 075, 2-stage												
Ratio		12	16	20	25	28	35	40	50	70	100	
Max. acceleration torque T <sub>2B</sub> (max. 1000 cycles per hour)	Nm	70	70	70	70	70	70	70	70	60	50	
	in.lb	620	620	620	620	620	620	620	620	531	443	
Nominal torque at gear output T <sub>2N</sub> (At n <sub>1N</sub> )	Nm	50	50	50	50	50	50	50	50	45	40	
	in.lb	443	443	443	443	443	443	443	443	398	354	
Emergency-stop torque T <sub>2Not</sub> (1000 times possible during the lifespan of the gearhead)	Nm	95	95	95	95	95	95	95	95	95	95	
	in.lb	841	841	841	841	841	841	841	841	841	841	
Permissible medium drive speed in n <sub>1N</sub> (At T <sub>2N</sub> )	rpm	3100	3100	3100	3100	3100	3100	3100	3400	4000	4000	
Max. continuous speed n <sub>1Ncym</sub> (At 20% T <sub>2N</sub> )	rpm	4000	4000	4000	4000	4000	4000	4000	4000	4000	4000	
Max. drive speed n <sub>1Max</sub>	rpm	6000	6000	6000	6000	6000	6000	6000	6000	6000	6000	
Average no-load running torque T <sub>012</sub> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	Nm	0.3	0.3	0.2	0.2	0.2	0.2	0.1	0.1	0.1	0.1	
	in.lb	2.7	2.7	1.8	1.8	1.8	1.8	0.9	0.9	0.9	0.9	
Max. torsional backlash j <sub>t</sub>	arcmin	≤ 4										
Torsional rigidity C <sub>t12</sub>	Nm/ arcmin	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	6.7	6.6	6.5
	in.lb/ arcmin	52	52	52	52	52	52	52	52	59	58	58
Max. axial force F <sub>2AMax</sub> <sup>b</sup>	N	2350										
	lbf	529										
Life L <sub>h</sub> Calculation see "Technical Basics"	h	See chapter 7.1.4 "Replacing the gearhead"										

Technical specifications for HG <sup>+</sup> 075, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
Weight incl. standard adapter plate m	kg	5.1									
	lbm	11.3									
Noise level L <sub>PA</sub> (At n <sub>1</sub> =3000 rpm w/o load)	dB(A)	≤ 66									
Max. permissible housing temperature	°C	+90									
	F	194									
Ambient temperature	°C	0 to +40									
	F	32 to 104									
Paint		Blue RAL 5002									
Direction of rotation		Drive and gear output counter-directional									
Protection class		IP 65									
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 14 mm	kgcm <sup>2</sup>	0.28	0.27	0.23	0.23	0.20	0.20	0.18	0.18	0.18	0.18
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	0.25	0.24	0.21	0.20	0.18	0.18	0.16	0.16	0.16	0.16
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 19 mm	kgcm <sup>2</sup>	0.73	0.71	0.68	0.67	0.63	0.62	0.63	0.63	0.63	0.63
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	0.64	0.63	0.60	0.59	0.55	0.55	0.56	0.55	0.55	0.55
<sup>a</sup> No-load running torques diminish during operation											
<sup>b</sup> Based on the shaft or flange center at the gear output											

Tbl-23: HG<sup>+</sup> 075, 2-stage: Technical specifications for use in areas with explosion hazards

### 9.4.3 Technical specifications for HG<sup>+</sup> 100 for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 100, 1-stage						
Ratio		3	4	5	7	10
Max. acceleration torque T <sub>2B</sub> (max. 1000 cycles per hour)	Nm	125	125	125	95	85
	in.lb	1106	1106	1106	841	752
Nominal torque at gear output T <sub>2N</sub> (At n <sub>1N</sub> )	Nm	75	75	75	60	55
	in.lb	664	664	664	531	487
Emergency-stop torque T <sub>2Not</sub> (1000 times possible during the lifespan of the gearhead)	Nm	200	200	200	200	200
	in.lb	1770	1770	1770	1770	1770
Permissible medium drive speed in n <sub>1N</sub> (At T <sub>2N</sub> )	rpm	1400	1400	1600	1400	1400
Max. continuous speed n <sub>1Ncym</sub> (At 20% T <sub>2N</sub> )	rpm	2100	2100	2100	1600	1500
Max. drive speed n <sub>1Max</sub>	rpm	3300	4500	4500	4500	4500
Average no-load running torque T <sub>012</sub> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	Nm	4.2	3.3	2.5	3.9	3.1
	in.lb	37	29	22	35	27
Max. torsional backlash j <sub>t</sub>	arcmin	≤ 4				

Technical specifications for HG <sup>+</sup> 100, 1-stage						
Ratio		3	4	5	7	10
Torsional rigidity $C_{t12}$	Nm/arcmin	10.7	12.1	14.0	14.2	14.4
	in.lb/arcmin	95	107	124	126	127
Max. axial force $F_{2AMax}^b$	N	3950				
	lbf	889				
Life $L_h$ Calculation see "Technical Basics"	h	See chapter 7.1.4 "Replacing the gearhead"				
Weight incl. standard adapter plate m	kg	9.3				
	lbm	21				
Noise level $L_{PA}$ (At $n_1=3000$ rpm w/o load)	dB(A)	≤ 66				
Max. permissible housing temperature	°C	+90				
	F	194				
Ambient temperature	°C	0 to +40				
	F	32 to 104				
Paint		Blue RAL 5002				
Direction of rotation		Drive and gear output counter-directional				
Protection class		IP 65				
Mass moment of inertia $J_1$ referring to the drive; Bore diameters of the clamping hub: 28 mm	kgcm <sup>2</sup>	4.64	3.80	3.34	2.98	2.79
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	4.10	3.36	2.95	2.64	2.47
Mass moment of inertia $J_1$ referring to the drive; Bore diameters of the clamping hub: 38 mm	kgcm <sup>2</sup>	11.8	11.0	10.6	10.2	10.0
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	10.4	9.7	9.3	9.0	8.9
<sup>a</sup> No-load running torques diminish during operation						
<sup>b</sup> Based on the shaft or flange center at the gear output						

Tbl-24: HG<sup>+</sup> 100, 1-stage: Technical specifications for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 100, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
Max. acceleration torque $T_{2B}$ (max. 1000 cycles per hour)	Nm	125	125	125	125	125	125	125	125	95	85
	in.lb	1106	1106	1106	1106	1106	1106	1106	1106	841	752
Nominal torque at gear output $T_{2N}$ (At $n_{1N}$ )	Nm	75	75	75	75	75	75	75	75	60	55
	in.lb	664	664	664	664	664	664	664	664	531	487
Emergency-stop torque $T_{2Not}$ (1000 times possible during the lifespan of the gearhead)	Nm	200	200	200	200	200	200	200	200	200	200
	in.lb	1770	1770	1770	1770	1770	1770	1770	1770	1770	1770
Permissible medium drive speed in $n_{1N}$ (At $T_{2N}$ )	rpm	2700	2700	2700	2700	2700	2700	2700	3100	3700	3700
Max. continuous speed $n_{1Ncym}$ (At 20% $T_{2N}$ )	rpm	3600	3600	3600	3600	3600	3600	3600	3600	3750	3750
Max. drive speed $n_{1Max}$	rpm	4500	4500	4500	4500	4500	4500	4500	4500	4500	4500

Technical specifications for HG <sup>+</sup> 100, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	0.7	0.7	0.6	0.4	0.4	0.3	0.2	0.2	0.2	0.2
	<b>in.lb</b>	6.2	6.2	5.3	3.5	3.5	2.7	1.8	1.8	1.8	1.8
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	≤ 4									
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	12.1	12.1	12.1	12.1	12.1	12.1	12.1	14.0	14.2	14.4
	<b>in.lb/arcmin</b>	107	107	107	107	107	107	107	124	126	127
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	3950									
	<b>lbf</b>	889									
<b>Life L<sub>h</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"									
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	10.6									
	<b>lbm</b>	23									
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	≤ 66									
<b>Max. permissible housing temperature</b>	<b>°C</b>	+90									
	<b>F</b>	194									
<b>Ambient temperature</b>	<b>°C</b>	0 to +40									
	<b>F</b>	32 to 104									
<b>Paint</b>		Blue RAL 5002									
<b>Direction of rotation</b>		Drive and gear output counter-directional									
<b>Protection class</b>		IP 65									
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 19 mm	<b>kgcm<sup>2</sup></b>	1.02	0.97	0.86	0.84	0.75	0.74	0.69	0.69	0.68	0.68
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	0.91	0.86	0.76	0.74	0.66	0.66	0.61	0.61	0.60	0.60
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 24 mm	<b>kgcm<sup>2</sup></b>	2.59	2.54	2.42	2.40	2.31	2.30	2.26	2.25	2.25	2.25
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	2.29	2.25	2.14	2.13	2.05	2.04	2.00	1.99	1.99	1.99
<sup>a</sup> No-load running torques diminish during operation											
<sup>b</sup> Based on the shaft or flange center at the gear output											

Tbl-25: HG<sup>+</sup> 100, 2-stage: Technical specifications for use in areas with explosion hazards

9.4.4 Technical specifications for HG<sup>+</sup> 140 for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 140, 1-stage						
Ratio		3	4	5	7	10
Max. acceleration torque T <sub>2B</sub> (max. 1000 cycles per hour)	Nm	190	190	205	185	170
	in.lb	1682	1682	1814	1637	1505
Nominal torque at gear output T <sub>2N</sub> (At n <sub>1N</sub> )	Nm	120	120	130	130	130
	in.lb	1062	1062	1151	1151	1151
Emergency-stop torque T <sub>2Not</sub> (1000 times possible during the lifespan of the gearhead)	Nm	400	420	420	420	400
	in.lb	3540	3717	3717	3717	3540
Permissible medium drive speed in n <sub>1N</sub> (At T <sub>2N</sub> )	rpm	1200	1200	1400	1300	1400
Max. continuous speed n <sub>1Ncym</sub> (At 20% T <sub>2N</sub> )	rpm	1500	1600	1800	1600	1700
Max. drive speed n <sub>1Max</sub>	rpm	2200	3000	4000	4200	4200
Average no-load running torque T <sub>012</sub> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	Nm	7.7	5.7	5	8.3	6.1
	in.lb	68	50	44	73	54
Max. torsional backlash j <sub>t</sub>	arcmin	≤ 4				
Torsional rigidity C <sub>t12</sub>	Nm/arcmin	32	36	41	39	38
	in.lb/arcmin	287	321	360	346	337
Max. axial force F <sub>2AMax</sub> <sup>b</sup>	N	6900				
	lbf	1553				
Life L <sub>h</sub> Calculation see "Technical Basics"	h	See chapter 7.1.4 "Replacing the gearhead"				
Weight incl. standard adapter plate m	kg	22.6				
	lbm	50				
Noise level L <sub>PA</sub> (At n <sub>1</sub> =3000 rpm w/o load)	dB(A)	≤ 68				
Max. permissible housing temperature	°C	+90				
	F	194				
Ambient temperature	°C	0 to +40				
	F	32 to 104				
Paint		Blue RAL 5002				
Direction of rotation		Drive and gear output counter-directional				
Protection class		IP 65				
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 38 mm	kgcm <sup>2</sup>	24.97	19.11	16.32	14.07	12.80
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	22.10	16.91	14.44	12.45	11.33
<sup>a</sup> No-load running torques diminish during operation						
<sup>b</sup> Based on the shaft or flange center at the gear output						

TbI-26: HG<sup>+</sup> 140, 1-stage: Technical specifications for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 140, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
<b>Max. acceleration torque T<sub>2B</sub></b> (max. 1000 cycles per hour)	<b>Nm</b>	190	190	190	205	190	205	190	205	185	170
	<b>in.lb</b>	1682	1682	1682	1814	1682	1814	1682	1814	1637	1505
<b>Nominal torque at gear output T<sub>2N</sub></b> (At n <sub>1N</sub> )	<b>Nm</b>	120	120	120	120	120	120	120	130	130	130
	<b>in.lb</b>	1062	1062	1062	1062	1062	1062	1062	1151	1151	1151
<b>Emergency-stop torque T<sub>2Not</sub></b> (1000 times possible during the lifespan of the gearhead)	<b>Nm</b>	400	420	420	420	420	420	420	420	420	400
	<b>in.lb</b>	3540	3717	3717	3717	3717	3717	3717	3717	3717	3540
<b>Permissible medium drive speed in n<sub>1N</sub></b> (At T <sub>2N</sub> )	<b>rpm</b>	2600	2600	2600	2600	2600	2600	2600	2800	2800	3500
<b>Max. continuous speed n<sub>1Ncym</sub></b> (At 20% T <sub>2N</sub> )	<b>rpm</b>	3500	3500	3500	3500	3500	3500	3500	3700	3700	3700
<b>Max. drive speed n<sub>1Max</sub></b>	<b>rpm</b>	4500	4500	4500	4500	4500	4500	4500	4500	4500	4500
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	1.5	1	0.8	0.6	0.6	0.4	0.4	0.3	0.3	0.3
	<b>in.lb</b>	13.3	8.9	7.1	5.3	5.3	3.5	3.5	2.7	2.7	2.7
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	≤ 4									
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	36	36	36	36	36	36	36	41	39	38
	<b>in.lb/arcmin</b>	319	319	319	319	319	319	319	363	345	336
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	6900									
	<b>lbf</b>	1553									
<b>Life L<sub>h</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"									
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	24.0									
	<b>lbm</b>	53									
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	≤ 68									
<b>Max. permissible housing temperature</b>	<b>°C</b>	+90									
	<b>F</b>	194									
<b>Ambient temperature</b>	<b>°C</b>	0 to +40									
	<b>F</b>	32 to 104									
<b>Paint</b>		Blue RAL 5002									
<b>Direction of rotation</b>		Drive and gear output counter-directional									
<b>Protection class</b>		IP 65									

Technical specifications for HG <sup>+</sup> 140, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 24 mm	<b>kgcm<sup>2</sup></b>	4.20	3.84	3.27	3.16	2.78	2.73	2.48	2.45	2.43	2.42
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	3.71	3.40	2.90	2.80	2.46	2.41	2.20	2.17	2.15	2.14
<b>Mass moment of inertia J<sub>1</sub></b> referring to the drive; Bore diameters of the clamping hub: 38 mm	<b>kgcm<sup>2</sup></b>	11.1 1	10.7 5	10.1 8	10.0 7	9.69	9.64	9.39	9.37	9.34	9.33
	<b>10<sup>-3</sup> in.lb.s<sup>2</sup></b>	9.83	9.51	9.01	8.92	8.58	8.53	8.31	8.29	8.27	8.26

<sup>a</sup> No-load running torques diminish during operation  
<sup>b</sup> Based on the shaft or flange center at the gear output

TbI-27: HG<sup>+</sup> 140, 2-stage: Technical specifications for use in areas with explosion hazards

#### 9.4.5 Technical specifications for HG<sup>+</sup> 180 for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 180, 1-stage						
Ratio		3	4	5	7	10
<b>Max. acceleration torque T<sub>2B</sub></b> (max. 1000 cycles per hour)	<b>Nm</b>	400	400	400	350	300
	<b>in.lb</b>	3540	3540	3540	3098	2655
<b>Nominal torque at gear output T<sub>2N</sub></b> (At n <sub>1N</sub> )	<b>Nm</b>	250	250	250	230	220
	<b>in.lb</b>	2213	2213	2213	2036	1947
<b>Emergency-stop torque T<sub>2Not</sub></b> (1000 times possible during the lifespan of the gearhead)	<b>Nm</b>	900	900	900	900	900
	<b>in.lb</b>	7965	7965	7965	7965	7965
<b>Permissible medium drive speed in n<sub>1N</sub></b> (At T <sub>2N</sub> )	<b>rpm</b>	900	1100	1200	1100	1100
<b>Max. continuous speed n<sub>1Ncym</sub></b> (At 20% T <sub>2N</sub> )	<b>rpm</b>	1100	1300	1500	1400	1400
<b>Max. drive speed n<sub>1Max</sub></b>	<b>rpm</b>	2000	2400	3300	3800	3800
<b>Average no-load running torque T<sub>012</sub></b> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	<b>Nm</b>	16	13	11	16.5	14
	<b>in.lb</b>	142	115	97	146	124
<b>Max. torsional backlash j<sub>t</sub></b>	<b>arcmin</b>	≤ 4				
<b>Torsional rigidity C<sub>t12</sub></b>	<b>Nm/arcmin</b>	71	80	91	89	88
	<b>in.lb/arcmin</b>	633	711	803	791	780
<b>Max. axial force F<sub>2AMax</sub></b> <sup>b</sup>	<b>N</b>	9900				
	<b>lbf</b>	2228				
<b>Life L<sub>h</sub></b> Calculation see "Technical Basics"	<b>h</b>	See chapter 7.1.4 "Replacing the gearhead"				
<b>Weight incl. standard adapter plate m</b>	<b>kg</b>	48				
	<b>lbm</b>	106				
<b>Noise level L<sub>PA</sub></b> (At n <sub>1</sub> =3000 rpm w/o load)	<b>dB(A)</b>	≤ 68				

Technical specifications for HG <sup>+</sup> 180, 1-stage						
Ratio		3	4	5	7	10
Max. permissible housing temperature	°C	+90				
	F	194				
Ambient temperature	°C	0 to +40				
	F	32 to 104				
Paint		Blue RAL 5002				
Direction of rotation		Drive and gear output counter-directional				
Protection class		IP 65				
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 48 mm	kgcm <sup>2</sup>	73.3	51.6	42.1	34.0	29.7
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	64.9	45.6	37.3	30.1	26.3
<sup>a</sup> No-load running torques diminish during operation <sup>b</sup> Based on the shaft or flange center at the gear output						

Tbl-28: HG<sup>+</sup> 180, 1-stage: Technical specifications for use in areas with explosion hazards

Technical specifications for HG <sup>+</sup> 180, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
Max. acceleration torque T <sub>2B</sub> (max. 1000 cycles per hour)	Nm	400	400	400	400	400	400	400	400	350	300
	in.lb	3540	3540	3540	3540	3540	3540	3540	3540	3098	2655
Nominal torque at gear output T <sub>2N</sub> (At n <sub>1N</sub> )	Nm	250	250	250	250	250	250	250	250	230	220
	in.lb	2213	2213	2213	2213	2213	2213	2213	2213	2036	1947
Emergency-stop torque T <sub>2Not</sub> (1000 times possible during the lifespan of the gearhead)	Nm	900	900	900	900	900	900	900	900	900	900
	in.lb	7965	7965	7965	7965	7965	7965	7965	7965	7965	7965
Permissible medium drive speed in n <sub>1N</sub> (At T <sub>2N</sub> )	rpm	1900	1900	1900	1900	1900	1900	1900	2050	2300	2450
Max. continuous speed n <sub>1Ncym</sub> (At 20% T <sub>2N</sub> )	rpm	2500	2500	2500	2500	2500	2500	2500	2500	2700	2700
Max. drive speed n <sub>1Max</sub>	rpm	4000	4000	4000	4000	4000	4000	4000	4000	4000	4000
Average no-load running torque T <sub>012</sub> (At n <sub>1</sub> =3000 rpm and 20°C gearhead temperature) <sup>a</sup>	Nm	3.3	2.5	2.0	1.8	1.4	1.3	1.0	1.0	1.0	1.0
	in.lb	29.2	22.1	17.7	15.9	12.4	11.5	8.9	8.9	8.9	8.9
Max. torsional backlash j <sub>t</sub>	arcmin	≤ 4									
Torsional rigidity C <sub>t12</sub>	Nm/arcmin	80	80	80	80	80	80	80	91	89	88
	in.lb/arcmin	708	708	708	708	708	708	708	805	788	779
Max. axial force F <sub>2AMax</sub> <sup>b</sup>	N	9900									
	lbf	2228									
Life L <sub>h</sub>	h	See chapter 7.1.4 "Replacing the gearhead"									
Weight incl. standard adapter plate m	kg	47.0									
	lbm	104									

Technical specifications for HG <sup>+</sup> 180, 2-stage											
Ratio		12	16	20	25	28	35	40	50	70	100
Noise level L <sub>PA</sub> (At n <sub>1</sub> =3000 rpm w/o load)	dB(A)	≤ 68									
	Max. permissible housing temperature	°C	+90								
Ambient temperature	°C	0 to +40									
	F	32 to 104									
Paint		Blue RAL 5002									
Direction of rotation		Drive and gear output counter-directional									
Protection class		IP 65									
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 38 mm	kgcm <sup>2</sup>	15.3	13.9	12.3	12.0	10.9	10.7	10.1	10.0	9.9	9.9
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	13.5	12.3	10.9	10.6	9.6	9.5	9.0	8.9	8.8	8.8
Mass moment of inertia J <sub>1</sub> referring to the drive; Bore diameters of the clamping hub: 48 mm	kgcm <sup>2</sup>	30.0	28.7	27.0	26.7	25.6	25.4	24.8	24.7	24.7	24.6
	10 <sup>-3</sup> in.lb.s <sup>2</sup>	26.6	25.4	23.9	23.6	22.7	22.5	22.0	21.9	21.8	21.8
<sup>a</sup> No-load running torques diminish during operation											
<sup>b</sup> Based on the shaft or flange center at the gear output											

Tbl-29: HG<sup>+</sup> 180, 2-stage: Technical specifications for use in areas with explosion hazards

## 9.5 Lubricant quantity

Gearhead size HG <sup>+</sup>	Ratio i	Oil type	Viscosity class ISO VG	Filling quantity [cm <sup>3</sup> ]
060	3, 4, 5, 16, 20, 25, 28, 35, 40, 50	Tribol 800	100	50
	7, 10, 70, 100	Tribol 800	220	60
075	3, 4, 5, 16, 20, 25, 28, 35, 40, 50	Tribol 800	100	110
	7, 10, 70, 100	Tribol 800	220	130
100	3, 4, 16, 20, 28, 40	Tribol 800	100	170
	5, 25, 35, 50	Tribol 800	100	190
	7, 10, 70, 100	Tribol 800	220	210
140	3	Tribol 800	100	270
	4, 16, 20, 28, 40	Tribol 800	100	300
	5, 25, 35, 50	Tribol 800	100	330
	7, 10, 70, 100	Tribol 800	220	380
180	3	Tribol 800	100	850
	4, 5, 16, 20, 25, 28, 35, 40, 50	Tribol 800	100	1000
	7, 70	Tribol 800	220	1200
	10, 100	Tribol 800	220	1350

Tbl-30: Lubricant quantity

## 9.6 Declaration of Conformity



### EG-Konformitätserklärung EC-Declaration of Conformity

Wir / We, **WITTENSTEIN alpha GmbH**  
 Anschrift / Address Walter-Wittenstein-Strasse 1  
 D-97999 Igersheim  
 Germany  
 Tel: +49 (0)700 - 493 10020  
 Fax: +49 (0)7931 - 493-200  
 E-Mail: info-alpha@wittenstein.de

erklären hiermit in alleiniger Verantwortung, dass die Erzeugnisse  
*hereby declare under our sole responsibility, that the products*

Bezeichnung: **TK<sup>+</sup>/SK<sup>+</sup>/HG<sup>+</sup> Hypoid-Winkelgetriebe**  
*Designation: TK<sup>+</sup>/SK<sup>+</sup>/HG<sup>+</sup> Hypoid right-angle gearheads*  
 Baugröße / Size: **SK<sup>+</sup>/HG<sup>+</sup> 060, SK<sup>+</sup>/HG<sup>+</sup> 075, SK<sup>+</sup>/HG<sup>+</sup> 100, SK<sup>+</sup>/HG<sup>+</sup> 140, SK<sup>+</sup>/HG<sup>+</sup> 180**  
**TK<sup>+</sup> 004, TK<sup>+</sup> 010, TK<sup>+</sup> 025, TK<sup>+</sup> 050, TK<sup>+</sup> 110**

Ausführung: **MF-Version**  
*Performance: MF-Version*

mit den wesentlichen Anforderungen der folgenden EN-Normen  
*comply with the principle demands of the following EN standards*

DIN EN 13463-1:2009	Nicht-elektrische Geräte für den Einsatz in explosionsgefährdeten Bereichen - Teil 1: Grundlagen und Anforderungen <i>Non-electrical equipment for potentially explosive atmospheres Part 1: Basic method and requirements</i>
DIN EN 13463-5:2004	Nicht-elektrische Geräte für den Einsatz in explosionsgefährdeten Bereichen - Teil 5: Schutz durch Konstruktive Sicherheit „c“ <i>Non-electrical equipment intended for use in potentially explosive atmospheres Part 5: Protection by constructional safety „c“</i>
DIN EN 13463-8:2004	Nicht-elektrische Geräte für den Einsatz in explosionsgefährdeten Bereichen - Teil 8: Schutz durch Flüssigkeitskapselung „k“ <i>Non-electrical equipment for potentially explosive atmospheres Part 8: Protection by liquid immersion „k“</i>

und den Prüfdokumenten übereinstimmt. Die Winkelgetriebe in der explosionsgeschützten Ausführung sind Geräte im Sinne des Artikels 1 (3) a) der EG-Richtlinie 94/9/EG und erfüllen die grundlegenden Sicherheits- und Gesundheitsanforderungen zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen gemäß Anhang II der RL 94/9/EG.  
*and agree with the test documents. Right-angle gearheads in highly explosive versions are devices in terms of Article 1 (3) a) of the EU directive 94/9/EC and fulfil the basic safety and health requirements for use according to regulations in explosive areas in accordance with supplement II of directive 94/9/EC.*

Kennzeichnung / Marking:  II 2G c k IIC T3 X und / and  
 II 2D c k 150 °C X  
 Kennzeichnung von TK<sup>+</sup> 110 / Marking of TK<sup>+</sup> 110:  II 2G c k IIB T3 X und / and  
 II 2D c k 150°C X

Document No.: 2097-D035547 Rev.: 02

page 1 of 2





alpha

WITTENSTEIN alpha GmbH  
Walter-Wittenstein-Straße 1  
97999 Igersheim

**WITTENSTEIN - being one with the future**

**[www.wittenstein.de](http://www.wittenstein.de)**